

MetroCount®

traffic data specialists

MTE Certification Training

Covers MetroCount Traffic Executive software v3.21 and
the MetroCount 5600 Series Vehicle classifier System

t
r
a
i
n
i
n
g

System Overview

Survey Planning

RSU Operation

Data Management

Data Processing

MetroCount

Australia

P.O. Box 1182
Fremantle WA 6959
Ph: 08 9430 6164
Fax: 08 9430 6187
Email: sales@metrocount.com


United Kingdom

Unit 15 Oliver Business Park
Oliver Road, Park Royal
London NW10 7JB
Ph: 020 8782 8999
Fax: 020 8782 8737
Email: uksales@metrocount.com

United States

11820 West Market Place, Suite M
Fulton, MD 20759
Ph: 800 576 5692
Fax: 301 490 3521
Email: usasales@metrocount.com

www.metrocount.com

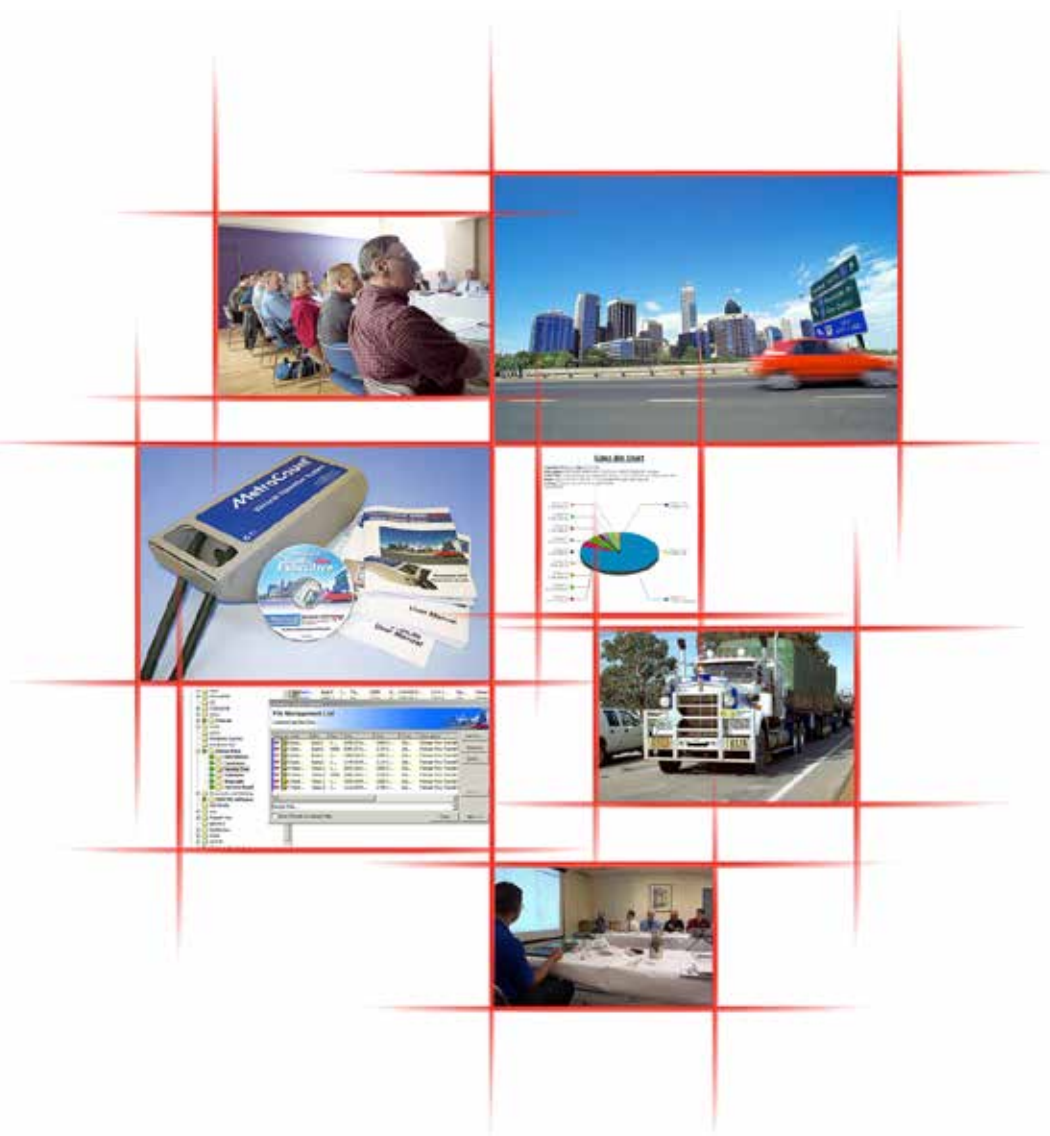

May 2013

CA/US edition



1 MTE Certification Training – Introduction	1
Welcome	1
Hands-on vs. Listening	1
Your Course Notes	1
A few key points	1
2 How Axle-based Classifiers Work	2
Counting vs. Classifying	2
ARX Classification Scheme	3
Scheme F2 Classification Scheme	4
3 The MetroCount 5600 Series Roadside Unit	6
Time Stamping	6
Signature Types	6
4 Classifier Installations	8
Equipment	10
Suggested Tools	10
A Final Vital Checklist	11
5 MCSetup – RSU Operating Software	13
Overview	13
Preferences	14
Checking the Roadside Unit	15
Setup	18
Monitoring a Survey	19
Unloading	19
6 Survey Management with Site Lists	22
Site List Data Entry Form	23
Programming a Roadside Unit Via a Site List	24
“State” Icons	25
7 MCReport’s “File Tree” for Data Management	26
Pop-up Menu	27
Setting Favorite Folders	27
Searching for Data	27
Editing Dataset Header Parameters	28
Checking Data Quality	29
8 MCReport – Data Analysis Software	32
Overview	32
The Report Wizard	32
The File Management List	33
The Report Vortex	34
Report Fundamentals	37
Report Cloning	39
Arranging Reports	39
Graph Rendering	40
Dispersion Plots	40
Time Based Plots	41

Event Count Reports	43
9 MCRReport's Report Profile	44
Speed Range	47
Separation	47
Direction	47
Classes	47
Scheme	47
Time Filtering	47
Advanced Profile Features	47
Profile Example – Speed Bin Chart (metric units)	50
Profile Example – Speed Bin Chart (non-metric units)	51
10 MCRReport's Custom Lists	52
Custom List Main Menu	52
Format Tab	52
Fields Tab	53
Advanced Tab	53
XML Tab	53
Custom Lists – Available Fields	54
11 Notes	56
12 Exam	58
Instructions	58
Multiple Choice	58
True or False	62
Activities	63

1 MTE Certification Training – Introduction

Welcome

The MTE Certification Training is a one day course designed to cover the fundamentals of traffic surveying and data analysis with the MetroCount 5600 Series Vehicle Classifier System and its associated MetroCount Traffic Executive (MTE) software.

The course is divided into two main parts:

- § The morning session focuses on the traffic survey process, and covers field aspects of site selection and sensor (i.e. tube) installation, and the setup and operation of the MetroCount Roadside Unit (RSU) using MCSetup and MCSetLite.
- § The afternoon session covers office-based tasks and software. We quickly cover the File Tree, then focus on MCReport as the main software component.

We then finish with a few advanced tips, and a discussion of speed analysis and issues.

Hands-on vs. Listening

With the MTE Certification Training we aim to introduce and cover all key MetroCount concepts, to aid and prompt further study of your MetroCount systems. Our other course, “MTE Advanced”, provides computer workstations to aid learning with many worked examples. Please consider attending the MTE Advanced course to extend your skills.

Your Course Notes

Written and refined by your presenters, and actually designed to be useful(!), these notes contain the essence of key MetroCount concepts and subjects we consider important and integral to successful system operation. We trust that you will find these notes a useful reference to complement your other MetroCount documentation.


A few key points

- § The MTE Certification Training course covers the current model MetroCount 5600 Series Vehicle Classifier System, at the “Plus” level.
- § The software version covered is Traffic Executive 3.21. A CD ROM with v3.21 is included with these notes.
- § The course focuses primarily on vehicle classification and speed surveys (i.e. two parallel tubes). Axle count (i.e. single tube) surveys are only covered in passing, in discussions and as required by attendees.
- § Queries may be asked at any time, especially if your presenter misses something in the notes that you want discussed. We intend the MTE Certification Training to be a networking forum, for discussing and sharing ideas – we all have different, valuable experiences that are worth sharing. We encourage the sharing of contact details, such as email addresses, with other participants.

Now, let's introduce ourselves...

2 How Axle-based Classifiers Work

- § Two axle sensors (usually tubes) installed a set distance apart on the road emit a signal (air pulse) when struck by tires. These signals are registered by the data logger (“Roadside Unit” or “RSU”).
- § Have you ever wondered how vehicle classifiers determine vehicle types? How they take a stream of axles and deduce, for example, whether the axles came from a car or multi-axel truck?
- § Axle-based classification is based on a simple physical formula.
- § Speed and class go hand-in-hand.
- § Axle-based Classification Schemes (eg ARX, Austroads 94, Scheme F2) characterize vehicles based on number of axles, wheelbase, and sometimes, axle placement and groupings.

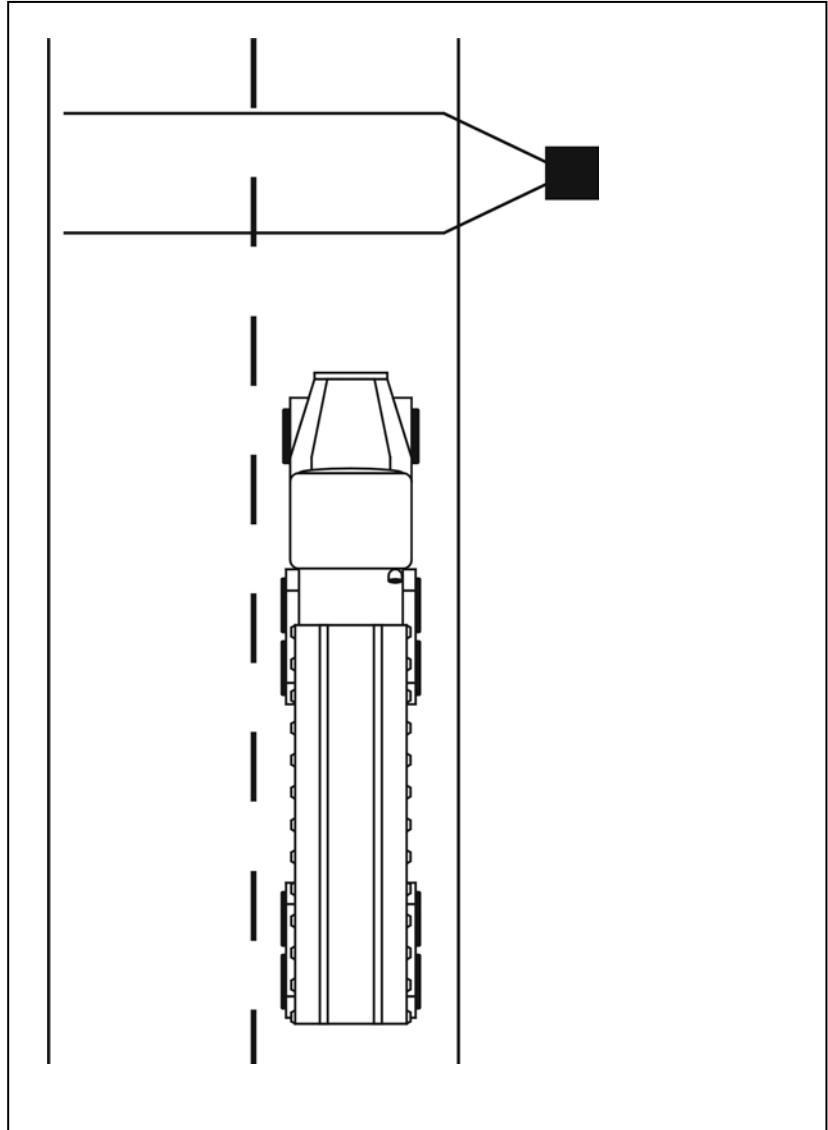













Counting vs. Classifying

Using two parallel tubes gives vehicle speed and class information, whereas using a single tube provides only axle hits. Sometimes an axle count is all that's required. But, if in doubt and to eliminate the chance of later regret/hassles, go for the most information: i.e. install two parallel tubes and collect speed/class data.

ARX Classification Scheme










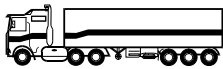



ARX is a modification of Austroads94. It combines double and triple road trains into Class 12, and moves all other classes up by one, and inserts a cycle class as Class 1.

Level 1	Level 2		Level 3	Vehicle Classification			
Length	Axles and Groups		Vehicle Type				
Type	Axles	Groups	Description	Class		Parameters	Dominant Vehicle
Short Up to 5.5m	Light Vehicles						
	2	1 or 2	Very Short	MC	1	d(1) < 1.7m and axles = 2	
	2	1 or 2	Short	SV	2	d(1) >= 1.7m, d(1) <= 3.2m and axles = 2	
	3,4 or 5	3	Short - Towing	SVT	3	groups = 3, d(1) >= 2.1m, d(1) <= 3.2m, d(2) >= 2.1m and axles = 3,4,5	
Medium 5.5m to 14.5m	Heavy Vehicles						
	2	2	Two Axle Truck or Bus	TB2	4	d(1) > 3.2m and axles = 2	
	3	2	Three Axle Truck or Bus	TB3	5	axles = 3 and groups = 2	
	>3	2	Four Axle Truck	T4	6	axles > 3 and groups = 2	
Long 11.5m to 19.0m	3	3	Three Axle Articulated Three axle articulated vehicle or Rigid vehicle and trailer	ART3	7	d(1) > 3.2m, axles = 3 and groups = 3	
	4	>2	Four Axle Articulated Four axle articulated vehicle or Rigid vehicle and trailer	ART4	8	d(2) < 2.1m or d(1) < 2.1m or d(1) > 3.2m axles = 4 and groups > 2	
	5	>2	Five Axle Articulated Five axle articulated vehicle or Rigid vehicle and trailer	ART5	9	d(2) < 2.1m or d(1) < 2.1m or d(1) > 3.2m axles = 5 and groups > 2	
	>=6	>2	Six Axle Articulated Six (or more) axle articulated vehicle or Rigid vehicle and trailer	ART6	10	axles = 6 and groups > 2 or axles > 6 and groups = 3	
Medium and Long Comb' Over 17.5m	>6	4	B Double B Double or Heavy truck and trailer	BD	11	groups = 4 and axles > 6	
	>6	>=5	Double or Triple Road Train Double road train or Heavy truck and two trailers	DRT	12	groups = 5 or 6 and axles > 6	
	Ungrouped Classes						
			Unclassifiable Vehicle		13		
			Unclassifiable Axle Event		0		

Group: Axle group, where adjacent axles are less than 2.1 m apart
Groups: Number of axle groups
Axles: Number of axles (maximum axle spacing of 10.0m)
d(1): Distance between first and second axle
d(2): Distance between second and third axle


Scheme F2 Classification Scheme

Scheme F2 is an axle-based implementation of FHWA’s visual classification scheme. There are other interpretations, but Scheme F2 works particularly well, with very little ambiguity between classes and few “unknown” vehicles.

Class		Dominant Vehicle	No. of Axles	Axle spacing in feet					
				Axle 1 to 2	Axle 2 to 3	Axle 3 to 4	Axle 4 to 5	Axle 5 to 6	Axle 6 to 7
Light Vehicles									
1	CYCLE		2	< 6.0					
2	PC		2	6.0 - 10.2					
			3	6.0 - 10.2	6.0 - 18.0				
			4						
Medium Vehicles									
3	2A-4T		2	10.2 - 13.0					
			3	10.2 - 13.0	6.0 - 18.0				
			4	10.2 - 13.0	6.0 - 18.0	< 6.0			
			5						
4	BUS		2	20.0 - 40.0					
			3	20.0 - 40.0	< 6.0				
Heavy Vehicles									
5	2A-6T		2	13.0 - 20.0					
6	3A-SU		3	6.0 - 23.0	< 6.0				
7	4A-SU		4	6.0 - 23.0	< 9.0	< 9.0			
			5	6.0 - 17.0	< 6.0	< 6.0	< 6.0		
			6	6.0 - 17.0	< 6.0	< 6.0	< 6.0	< 6.0	
Articulated Vehicles									
8	<5A DBL		3	6.0 - 17.0	14.0 - 40.0				
			4	6.0 - 20.0	< 6.0	6.0 - 40.0			
			4	6.0 - 17.0	14.0 - 40.0	< 6.0			
9	5A DBL		5	6.0 - 22.0	< 6.0	6.0 - 40.0	< 12.5		
			5	6.0 - 22.0	< 6.0	6.0 - 23.0	< 23.0		
10	>6A DBL		6	6.0 - 22.0	< 6.0	< 40.0	< 11.0	< 11.0	
			7	6.0 - 22.0	< 6.0	< 40.0	< 13.0	< 13.0	< 13.0
Multi-unit Vehicles									
11	<6A MULTI		5	6.0 - 17.0	11.0 - 25.0	6.0 - 18.0	11.0 - 25.0		
12	6A MULTI		6	6.0 - 22.0	< 6.0	< 25.0	6.0 - 18.0	11.0 - 25.0	
13	>6A MULTI		7 or more	< 40.0	< 40.0	< 40.0	< 40.0	< 40.0	< 40.0
Ungrouped Classes									
14		Unclassifiable vehicle							
0		Unclassifiable axle event							

Exercise

With the information provided, calculate the speed (V) and wheelbase (WB) of this vehicle:

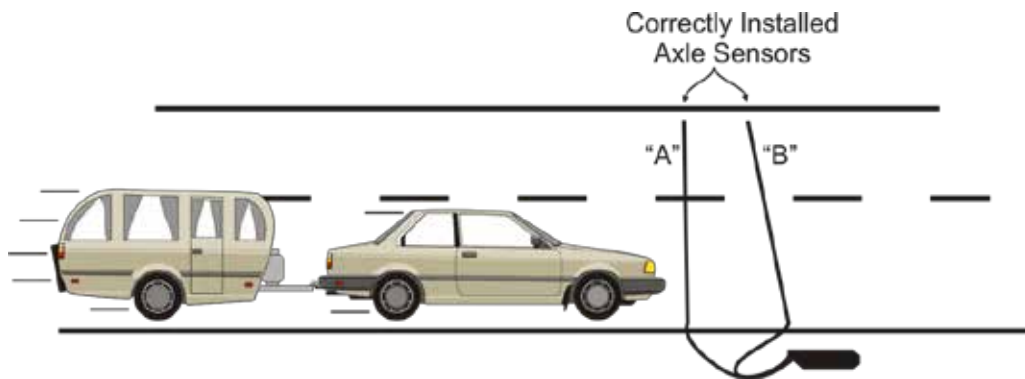

Tube spacing:	1 m
Time of first axle strike on "A" Sensor (t_A):	13:00:16.226 s
Time of first axle strike on "B" Sensor (t_B):	13:00:16.264 s
Time offset first to second axle:	0.106 s
Time offset second to third axle:	0.129 s

Speed:Step 1:

$$\Delta t = t_B - t_A$$

$$\Delta t = \underline{\hspace{2cm}} \text{ s}$$

Step 2:

$$V = \text{tube spacing} / \Delta t$$

$$V = \underline{\hspace{2cm}} \text{ m} / \underline{\hspace{2cm}} \text{ s}$$

$$V = \underline{\hspace{2cm}} \text{ m/s}$$

$$V = \underline{\hspace{2cm}} \text{ km/hr}$$

(hint: $V \text{ m/s} \times 3.6$)

$$V = \underline{\hspace{2cm}} \text{ mph}$$

(hint: $V \text{ km/hr} \times 0.62$)

Wheelbase:

$$\text{WB} = \text{Total Time offset} \times \text{Velocity}$$

$$= \underline{\hspace{2cm}} \text{ s} \times \underline{\hspace{2cm}} \text{ m/s}$$

$$= \underline{\hspace{2cm}} \text{ m}$$

$$= \underline{\hspace{2cm}} \text{ ft}$$

(hint $1 \text{ m} = 3.28 \text{ ft}$)

Distance between axles:

$$\text{D1:} = 1^{\text{st}} \text{ time offset} \times \text{Velocity}$$

$$= \underline{\hspace{2cm}} \text{ s} \times \underline{\hspace{2cm}} \text{ m/s}$$

$$= \underline{\hspace{2cm}} \text{ m}$$

$$= \underline{\hspace{2cm}} \text{ ft}$$

(hint $1 \text{ m} = 3.28 \text{ ft}$)

$$\text{D2:} = 2^{\text{nd}} \text{ Time offset} \times \text{Velocity}$$

$$= \underline{\hspace{2cm}} \text{ s} \times \underline{\hspace{2cm}} \text{ m/s}$$

$$= \underline{\hspace{2cm}} \text{ m}$$

$$= \underline{\hspace{2cm}} \text{ ft}$$

(hint $1 \text{ m} = 3.28 \text{ ft}$)

∴ ARX Class:

∴ Scheme F2 Class:

3 The MetroCount 5600 Series Roadside Unit

The MetroCount 5600 Series Roadside Unit (RSU) is the hardware component of the MetroCount Vehicle Classifier System. All MetroCount Roadside Units are designed to make the process of data collection as simple as possible, allowing you to focus on the task of analyzing your data.

The MetroCount 5600 Series Roadside Unit is very cleverly designed, and has a number of major features, including:

- § Excellent battery performance,
- § “Dual-level” protection,
- § Unique Road case design,
- § Integral tube locking.

It is important to remember that your MetroCount Roadside Unit is only a part of the MetroCount system: your Traffic Executive software completes the system.

Time Stamping

The MetroCount 5600 Roadside Unit is a time-stamping traffic recorder. The unit has two pneumatic sensors, and simply logs the time of detected air pulses. Each sensor hit is time-stamped with a resolution better than 1 millisecond. The resulting raw data stored in the unit has no concept of vehicles, providing MetroCount Traffic Executive’s analysis of software, MCReport, with unrestricted flexibility. During data analysis, MCReport scans the axle stream extracting groups of axles that belong to a single vehicle. The speed of the vehicle is calculated from the first matching A and B sensor hits, using the simple formula, $V = s/t$

Signature Types

When you purchase a MetroCount system, you choose the level of software support you want (eg “Regular”, “Plus”). A unique digital Signature is embedded in each Roadside Unit, which is used by the software to validate your chosen level of support.

The MetroCount 5600 “Regular” Roadside Unit is designed to fulfill the needs of those who are used to older “binning” systems, whilst still providing immense flexibility.

The MetroCount 5600 “Plus” Roadside Unit unlocks all of Traffic Executive’s reports (excluding the Timing Analysis (Phase) reports).

Most MetroCount Signatures can be upgraded any time after the original purchase. When upgrading, MetroCount will email or fax a new signature, which is installed via the software. Once upgraded, new datasets then have access to additional software features (see Traffic Executive User Manual appendices).

If you upgrade your Roadside Units, MetroCount can in most cases upgrade your previous data sets, too.

Other signature types are also available. For example, the “Phase” signature unlocks the Timing Analysis reports (applicable only to the MC57xx range). The “PlusB” signature provides access to MCReport’s scripting features, allowing automated data processing.

Some features of the MetroCount 5600 Series Roadside Unit...



Time Stamps every axle better than 1ms resolution

Unique “Dual Level” protection



Stainless steel Roadcase with Integral tube locking – light, yet strong!

Totally weatherproof



Conformally coated electronics, all Surface Mount Technology

Adaptive “auto ranging” air sensors = no calibration




User replaceable D-size alkaline batteries = at least 290 days of continuous operation.

Memory up to 2MB – stores up to 1 million axles




4 Classifier Installations

The Roadside Unit can be installed using a variety of Sensor Configurations, to obtain either classification data, or short-term event count data. Using a Classifier Sensor Layout obtains the parameters of volume, class, speed, direction, headway and so on. Using a Count Sensor Layout allows you to obtain short-term volumetric data.

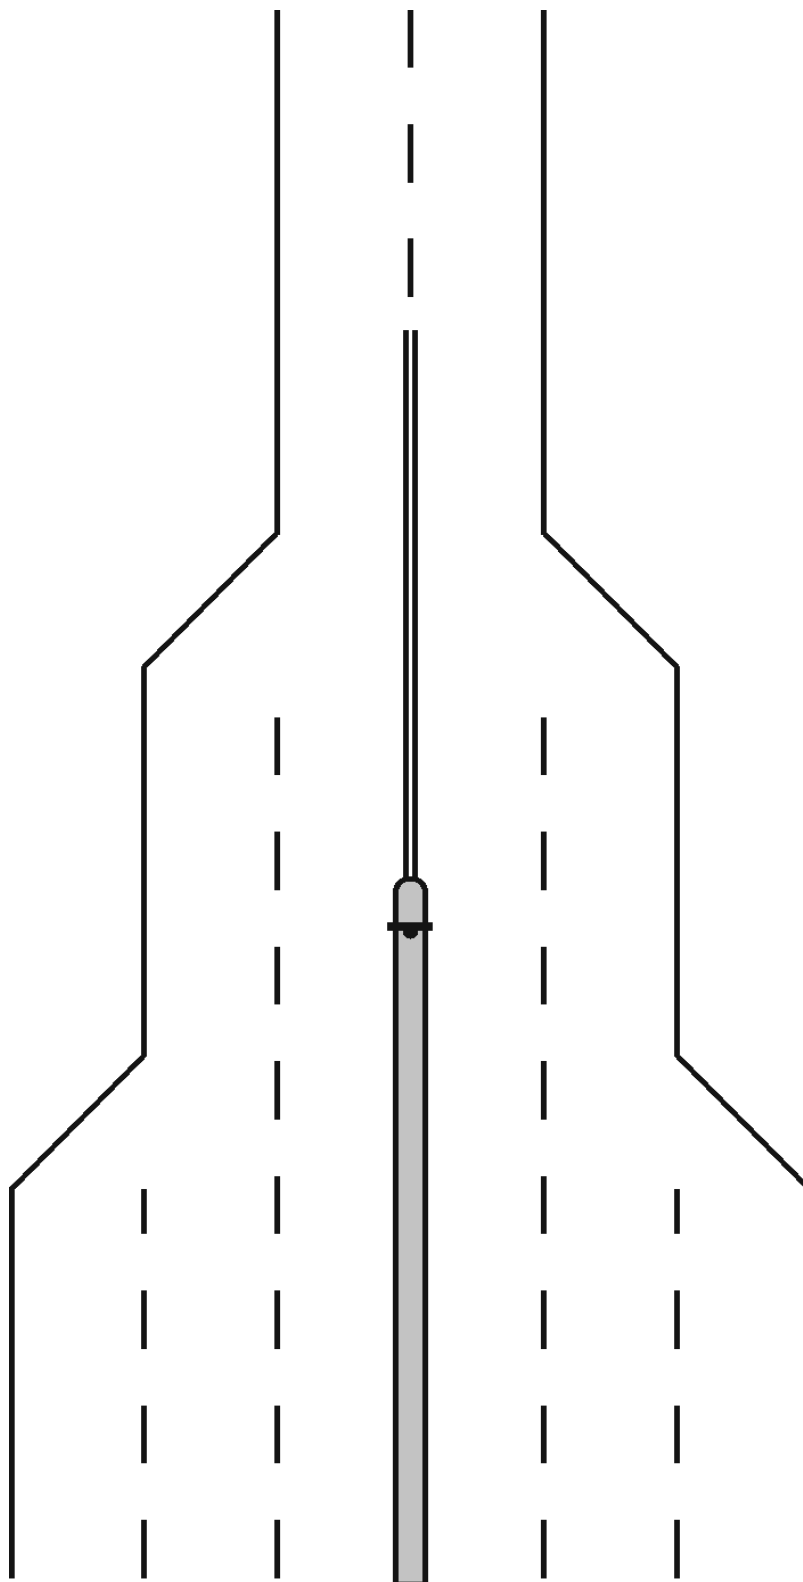

Surveys across two or more unidirectional lanes

Why should you avoid surveying in the following situation where possible?

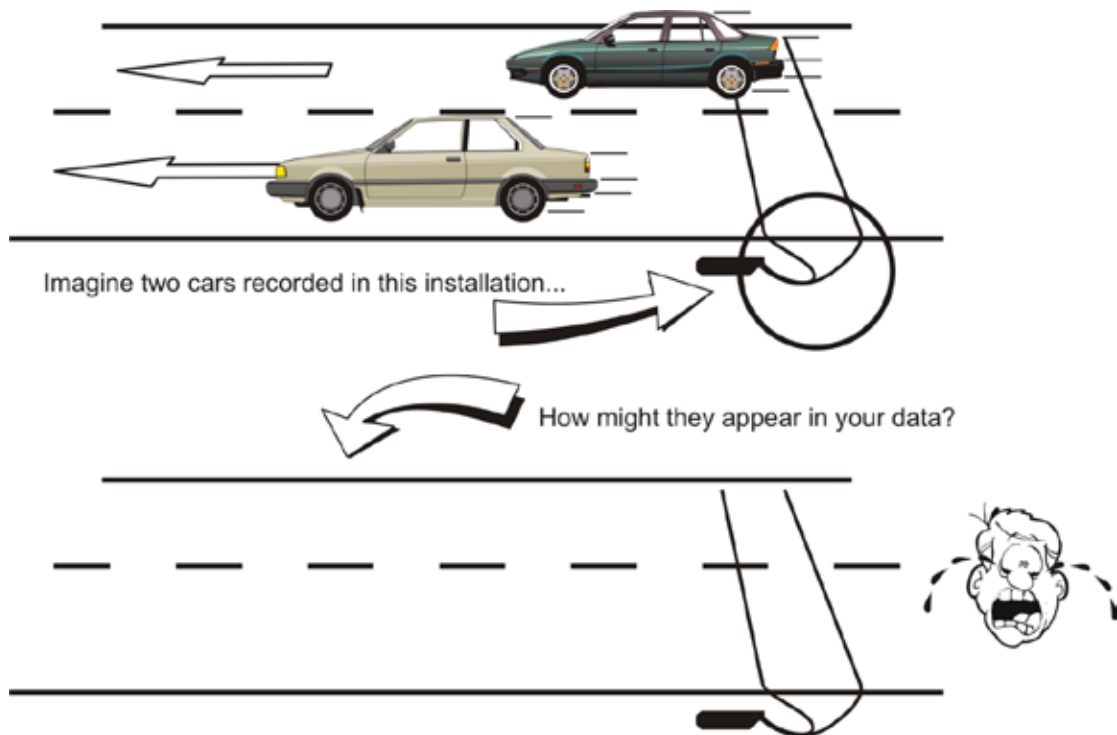


If you do surveys in this situation, highly useful and useable results can still be obtained, but be aware of your system's limitations and be cautious when quoting your results.

A note on speed surveys

Most vehicles can decelerate faster than they can accelerate. Therefore, the speed of a vehicle along a road segment is often biased in the direction of travel.

If you're doing speed surveys, it pays to bear this in mind. Rather than using one mid-block classifier, using two units, each offset from the midpoint in the direction of travel, may result in higher speed recordings, and thus more accurately monitor maximum speeds and true driver behavior.

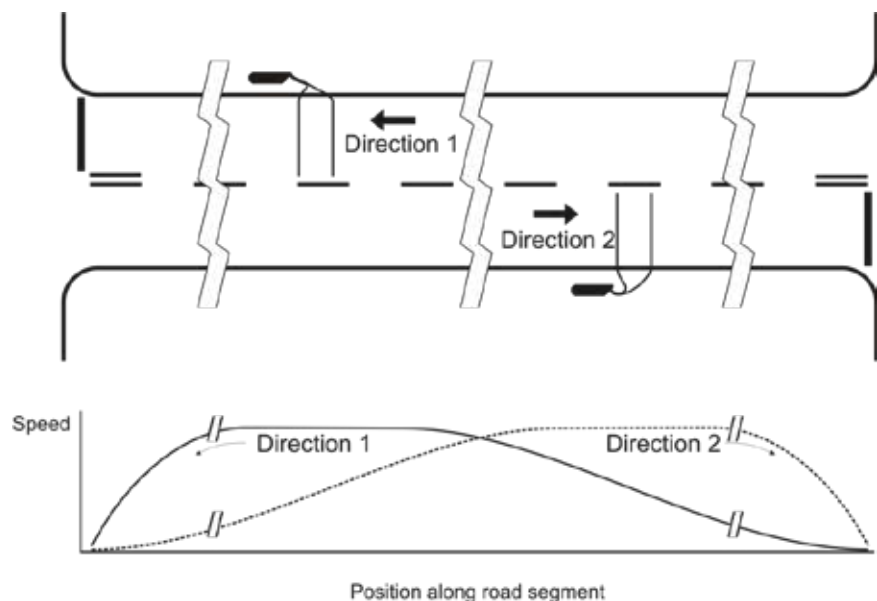

Equipment

- § Road tube;
- § Road nails or deck spikes;
- § Figure-8 road cleats;
- § Centre lane flaps (optional);
- § Vehicle Classifier;
- § Roadside unit case;
- § Stainless steel security stroop and padlock;
- § Protective dust cap;
- § Bitulastic tape (for securing sensors);
- § Pipette cork (optional); and
- § Rubber cap (optional).



Suggested Tools

- § Tape measure, calibrated stick or tube spacing gauge;
- § 4mm hex ball driver;
- § Heavy Duty Claw Hammer;
- § Heavy ball hammer;
- § Crowbar;
- § Side cutters or pliers;
- § Chalk or lumber crayon; and
- § Utility knife or box cutter.



Notes:

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins or other markings on the paper.


A Final Vital Checklist

There are four major items to be checked when installing road tubes for classification surveys. When installed, your tubes must:

- p _____
- _____
- p _____
- _____
- p _____
- _____
- p _____
- _____

NOTE: A short tube / long tube combination results in a delay to one of the air pulses. This decreases the vehicles' recorded speed and wheelbase in one direction, and increases them in the other.

Inadvertently using a short tube / long tube combination results in short slow vehicles in one direction, and long, fast vehicles in the other:

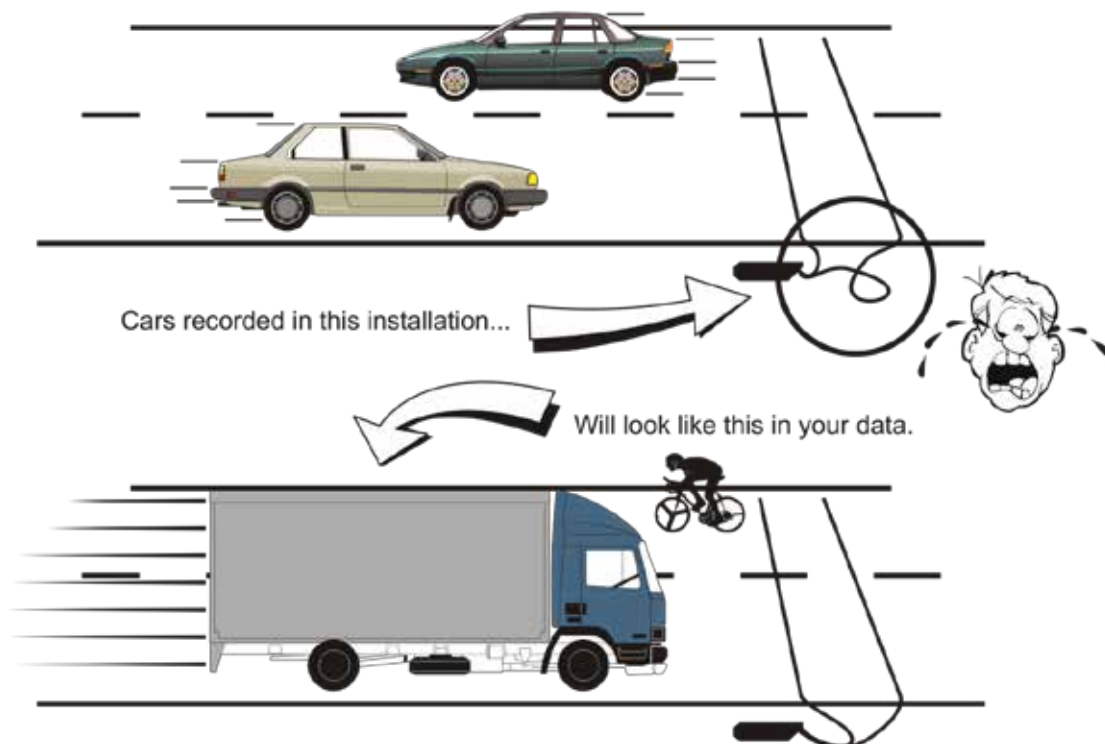

Tube Length Error Example

Errors in tube length often manifest in strange-looking Class Speed matrices. Directional filtering (see Profiles later) reveals the error – low speed two-axle short vehicles in one direction, high speed two-axle long vehicles in the other:

Class Speed Matrix, both directions

ClassMatrix.11
 Site: 3seg80 DWE
 Description: seg80 batlow road between cottams road and white gate
 Filter time: 12:00 Monday, 7 June 2004 -> 9:00 Wednesday, 16 June 2004
 Scheme: Vehicle classification (AustRoads94)
 Filter: CIs(1 2 3 4 5 6 7 8 9 10 11 12) Dir(EW) Sp(5,160) Sep(>0)

Speed (km/h)	1	2	3	4	5	6	7	8	9	10	11	12	Speed Totals
10 - 20													1 0.0%
20 - 30		10		1	2				2				15 0.2%
30 - 40		114	1	15	5				4	10			157 2.5%
40 - 50		559	15	71	18	3	1	2	1	78	1		749 12.1%
50 - 60		1500	36	119	36	1	4	4	2	167	9		1878 30.3%
60 - 70		602	14	252	15		9	2	2	89	2		987 15.9%
70 - 80		103		461	9		16	7	2	30	4		632 10.2%
80 - 90		101		690	6	1	17	10		17	1		843 13.6%
90 - 100		34		555	2		5			2			598 9.6%
100 - 110		10		238	1		2			1			252 4.1%
110 - 120		6		55									61 1.0%
120 - 130		5		21	1								27 0.4%
130 - 140				3									3 0.0%
140 - 150				2									2 0.0%
150 - 160				1									1 0.0%
	3845	46	2483	5	54	25	11	484	16	1	8	6286	
	2.1%	1.1%	40.0%	0.5%	0.1%	0.9%	0.4%	0.2%	6.5%	0.3%	0.0%	0.0%	

Class Totals

Class Speed Matrix, West bound

ClassMatrix.11
 Site: 3seg80 DWE
 Description: seg80 batlow road between cottams road and white gate
 Filter time: 12:00 Monday, 7 June 2004 -> 9:00 Wednesday, 16 June 2004
 Scheme: Vehicle classification (AustRoads94)
 Filter: CIs(1 2 3 4 5 6 7 8 9 10 11 12) Dir(W) Sp(5,160) Sep(>0)

Speed (km/h)	1	2	3	4	5	6	7
10 - 20							
20 - 30							
30 - 40	111	1	13	5			
40 - 50	554	14	57	16	2		1
50 - 60	1465	35	63	22	1	2	
60 - 70	524	12	2	2			
70 - 80	14						
80 - 90							
90 - 100							
100 - 110							
110 - 120							
120 - 130							
130 - 140							
140 - 150							
150 - 160							
	2673	42	136	40	3	2	1
	83.9%	1.3%	4.3%	1.5%	0.1%	0.1%	0.0%

Class Speed Matrix, East bound

ClassMatrix.11
 Site: 3seg80 DWE
 Description: seg80 batlow road between cottams road and white gate
 Filter time: 12:00 Monday, 7 June 2004 -> 9:00 Wednesday, 16 June 2004
 Scheme: Vehicle classification (AustRoads94)
 Filter: CIs(1 2 3 4 5 6 7 8 9 10 11 12) Dir(E) Sp(5,160) Sep(>0)

Speed (km/h)	1	2	3	4	5	6	7	8	9	10	11	12	Speed Totals
10 - 20													0 0.0%
20 - 30													1 0.0%
30 - 40	3												6 0.2%
40 - 50	5	1	14	2	1	1	1		3				28 0.9%
50 - 60	35	1	56	14		2	4	2	32	1			147 4.9%
60 - 70	78	2	250	13		9	2	1	70	2			427 14.2%
70 - 80	89		461	9		16	7	2	30	4			618 20.5%
80 - 90	101		690	6	1	17	10		17		1		843 28.0%
90 - 100	34		555	2		5			2				598 19.8%
100 - 110	10		238	1		2			1				252 8.4%
110 - 120	6		55										61 2.0%
120 - 130	5		21	1									27 0.9%
130 - 140			3										3 0.1%
140 - 150			2										2 0.1%
150 - 160	1												1 0.0%
	368	4	2347	48	2	52	24	6	155	7	1	8	3814
	12.2%	0.1%	77.9%	1.4%	0.1%	1.7%	0.8%	0.2%	5.1%	0.2%	0.0%	0.0%	

Class Totals






5 MCSetup – RSU Operating Software

Overview

MCSetup is the component of MTE used to interface with the Roadside Unit. The following display is the startup screen for the MCSetup application.




With MCSetup you use the large buttons to perform the following tasks:

- | | |
|---|---|
|  | → Check the status of the Roadside Unit; |
|  | → Setup of the Roadside Unit to start a new survey; |
|  | → Unload data from the Roadside Unit, including dynamic graph of axle hits; |
|  | → View vehicles and axle hits in real-time to verify sensor installation; |
|  | → Change data channels (MC5700 Series only – not applicable for MC5600). |

Other Roadside Unit diagnostics are available in the menu.


Preferences

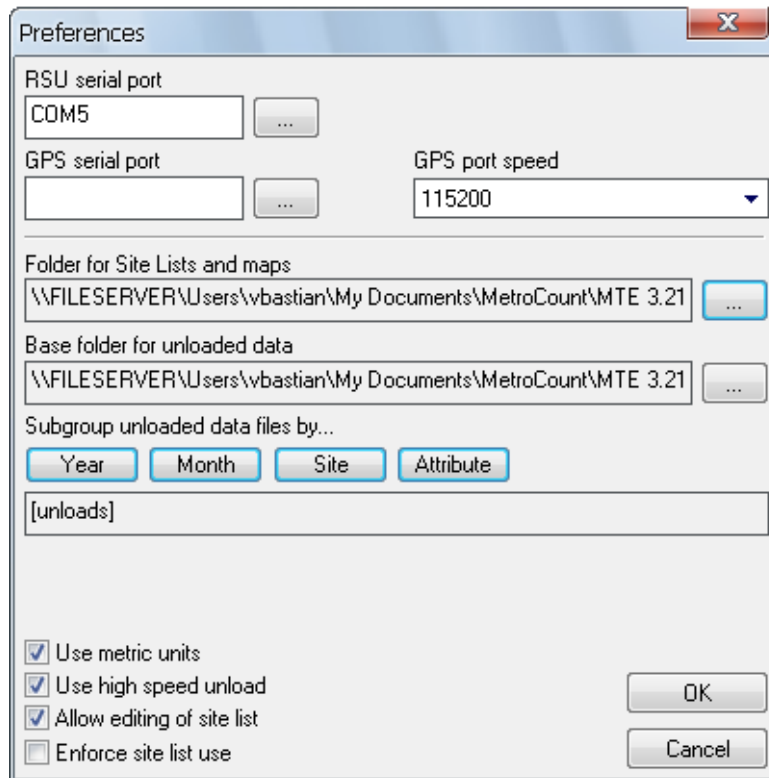

When you first start MCSetup, you are required to set your preferences. To change Preferences at any time, choose View » Preferences.

Use MCSetup ‘Preferences’ to choose your serial communications port. In the event that you cannot communicate with your Roadside Unit, you may have simply selected the incorrect comms port in ‘Preferences’.


Choose the folder where you want to store your MetroCount data, then use the buttons for further sub-grouping. NOTE: MCSetup will create folders for you if they don’t already exist.

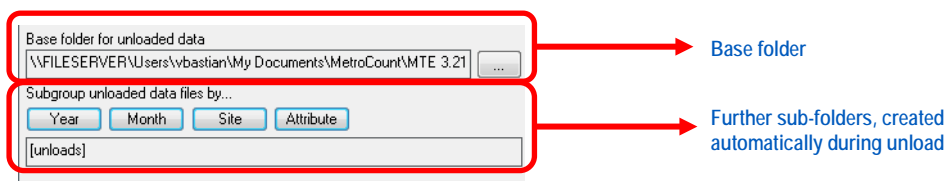

MetroCount uses a combination of site number, plus day and month of unload to create unique 8-character dataset names. Choose ‘long file names’ if you want to override this with more long Windows-only file names.

Allowing editing of site lists, and enforcing site list usage, are options that help you better manage your survey programs (covered later in the course). Note: if the big Setup and Unload buttons are greyed-out, then you have selected “Enforce site list use”. De-select to enable these buttons for use without an open site list.

Checking the Roadside Unit

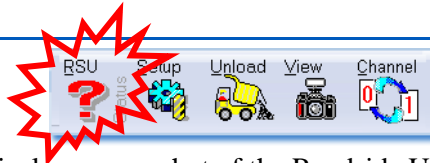


The status dialog box in MCSetup displays a snapshot of the Roadside Units current status.

The dialog box pictured below opens when you click on the RSU Status button to display status information. The status information is divided into five pages: Data, RSU, Battery, Sensors and Memory. We recommend you conduct a Roadside Unit status check during a survey to review the data collected and detect if any potential problems may arise.


Data Page

The Data page displays the information you entered into your Roadside Unit during setup. Details here are covered later in the course, in the Setup section.

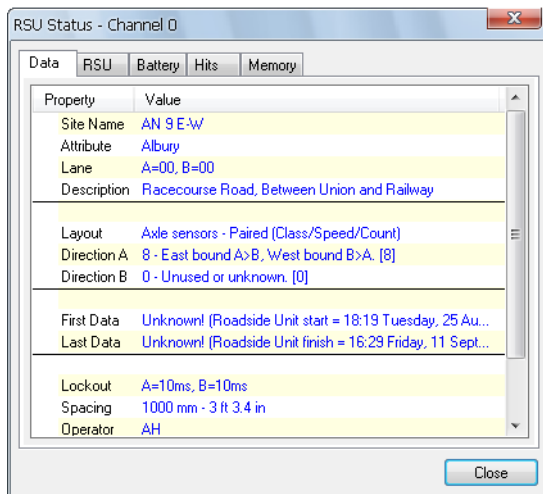

RSU Page


The RSU page contains information about the Roadside Unit's Header status. The 'Ident' field displays the unique serial number of your Roadside Unit. 'Status' text is important, and should be noted whenever you check your Roadside Unit's status.

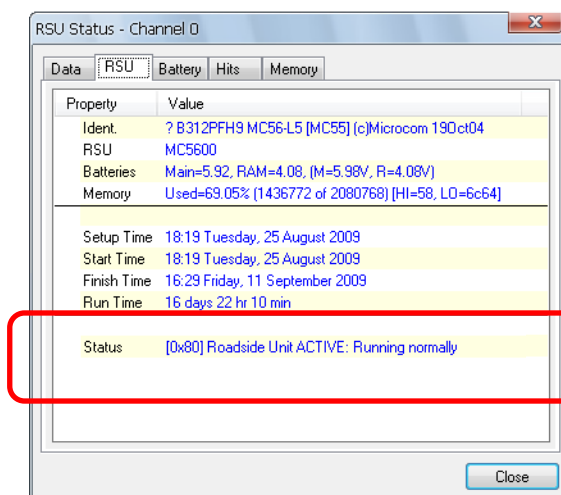

Watch the Status text change as you perform Setups and Unloads, etc.

Battery Page


The Battery page displays your Roadside Unit's battery voltage for the non-rechargeable alkaline battery pack. Battery life remaining is based on current consumption, and the battery pack's discharge characteristics, which is active for 290 days. Typically a 5600 Series Roadside Unit will stop logging once the alkaline battery is reduced to 4.8 volts.

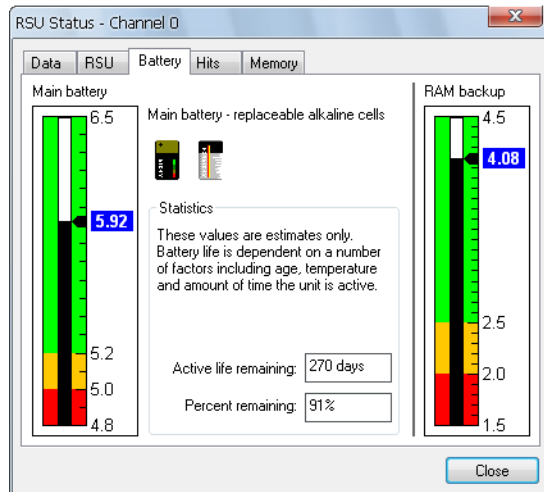


Note that the RAM backup battery receives its power from the main battery, and should always remain in the “green” zone.

Hits Page

The Sensors page shows information about the axle hits logged by the Roadside Unit for the data currently in memory. For classifier surveys an A/B ratio of between 95 – 105% is acceptable. MCSetup will issue a warning when you click the RSU status button if there is a problem with the sensor balance.

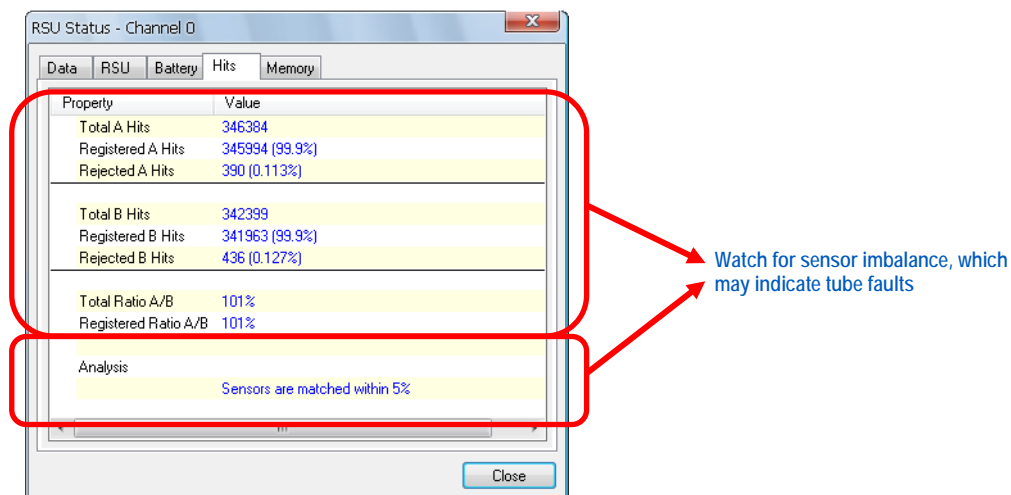

The Memory tab displays a graphical representation of the Roadside Unit's memory. When the Roadside Unit's memory fills up, it will stop logging vehicles. Therefore it is important to monitor the memory used. The Memory page contains a run-time estimate that you can use as a guide.

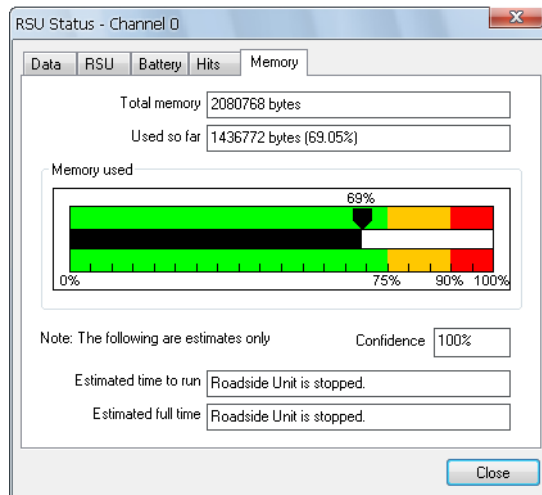[illegible]

Setup



The Roadside Unit Setup dialog box allows you to quickly setup for a new survey:

Axle sensors - Paired (Class/Speed/Count)
 Axle sensors - Separate (Count)
 Axle sensors - Split (Count)

0 - Unused or unknown.
 1 - North bound, A hit first.
 2 - East bound, A hit first.
 3 - South bound, A hit first.
 4 - West bound, A hit first.
 5 - South bound A>B, North bound B>A.
 6 - West bound A>B, East bound B>A.
 7 - North bound A>B, South bound B>A.
 8 - East bound A>B, West bound B>A.

Sensor spacing
 Spacing may be entered in either units
 Metric Spacing
 1000 Millimetres
 Non-metric Spacing
 3 Feet 3.4 Inches

Roadside Unit Setup
 Set site information here

Site: A979H8KQ Attribute: Operator: ZAP Location: Start time: Immediately Site description: MCSetup factory setup Sensor layout: Axle sensors - Paired (Class/Speed/Count) Lockout (ms): 30 Set Lockout

Direction
 A->B 1 - North bound, A hit first. 0
 0 - Unused or unknown. 0
 0 - Unused or unknown. 0
 0 - Unused or unknown. 0

Lane
 0 0 0 0

Spacing
 1000 mm - 3 ft 3.4 in Set Spacing

Roadside Unit Start Time
 Set the time for the Roadside Unit to start. The unit can be deferred for up to ten days.
 Start time
 Start immediately
 12:07 Tuesday, 22 September 2009
 Start immediately
 Start on next hour
 Start on next day
 Start next Monday
 Start next Saturday

10ms - Multiple lane
 20ms - Multiple lane special
 30ms - Single lane normal
 40ms - See Operator Manual
 50ms - See Operator Manual
 60ms - See Operator Manual
 70ms - See Operator Manual
 80ms - See Operator Manual
 90ms - See Operator Manual
 100ms - See Operator Manual

- § In the 'Site' field, use a unique alpha-numeric identifier for each installation.
- § 'Attribute' is optional. 'Attribute' will be set to the current latitude and longitude if obtained from an optional GPS unit.
- § Use 'Lane' "0" for two lane bi-directional classification sites, otherwise number each lane separately.
- § 'Set Lockout' from the menu.
- § Enter sensor 'Spacing', checked and verified beforehand (use a tape measure! Inaccurate tube spacing results in inaccurate data!).
- § Set the 'Start time' to start now, next hour, midnight tonight or defer to midnight Sunday, say.
- § Enter a site description. MCRpt can search the site Description field for a speed limit enclosed in angle brackets "<>". Default speed limit is km/h. Append an 'm' or 'M' for mph.


Example Site Descriptions	
km/h	mph
Hay St <60>	<40 mph> Speed test, Euston Road
<60km/h> Hay Street	ACPO test, Harrow Road <40m>
Hay St, <50 km/h> study	Harrow Road, PSL=<40 MPH>

NOTE: The speed limit can appear anywhere in the description, but other angle brackets cannot be inserted when using this feature.

- § For classifier layouts, choose a Direction that characterizes the flow over your sensors. For count layouts, choose the flow over each sensor separately.


NOTE: Your Roadside Unit's sensor inputs (i.e. the brass spigots) are clearly labeled 'A' and 'B'. Your sensors (i.e. tubes) only assume their 'A' or 'B' identity after you've connected them to the Roadside Unit.

Monitoring a Survey

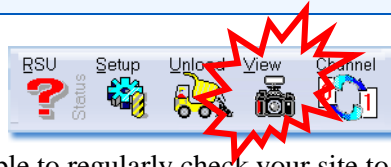

During a survey it is advisable to regularly check your site to ensure that any loss in data quality is detected before a survey is completed.

NOTE: Remember that your MetroCount Roadside Units store every axle hit. Traffic views in MCSetup are therefore transient representations of the actual data and **MUST BE USED WITH CAUTION.**

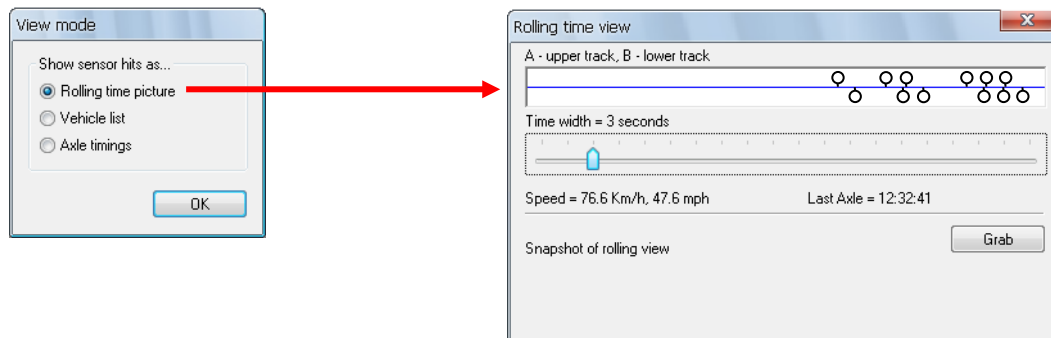

Unloading



- § Uncheck 'Stop the RSU after unloading data' to unload the data so far, but continue data

Unload Wizard

Unload options
Set the unload mode and file name here

☒ Stop the RSU after unloading data

Suggested file name
\\FILESERVER\Users\vbastian\My Documents\MetroCount\MTE 3.21\Data\AN 9 E-W22Sep2009.EC0

The suggested name is based on the data header from the Roadside Unit and option settings.

Change name... Cancel Next >>

DON'T CHANGE THE DEFAULT FILE EXTENSION! Doing so won't damage your data, but you may have trouble finding it again later!

gathering (i.e. for a mid-survey check).

- § Check 'Stop the RSU after unloading data' to complete your survey.

Create path

Confirm unload destination
The file path is shown here

The path and file shown in bold will be created...

- \\FILESERVER\Users\
 - vbastian
 - My Documents
 - MetroCount
 - MTE 3.21
 - Data
 - 0822Sep2009.EC0**

File size = 240 bytes
Free space on drive = 75.3G bytes



<< Back Start unload

WARNING: Don't change the file extension (eg 'EC0', 'EC1', etc). If you do, other MetroCount programs eg the File Tree will not identify your datasets.


NOTE: After unloading your data, even if you 'Stop the RSU after unloading data', the data is retained in your Roadside Unit until you do the next setup.

Data Quality Check During Unload

The easiest method of performing a data quality assessment mid-survey is to perform an Unload without stopping the RSU. This will leave the Roadside Unit active, while allowing you to view the A and B sensor hit plots as the data transfers.

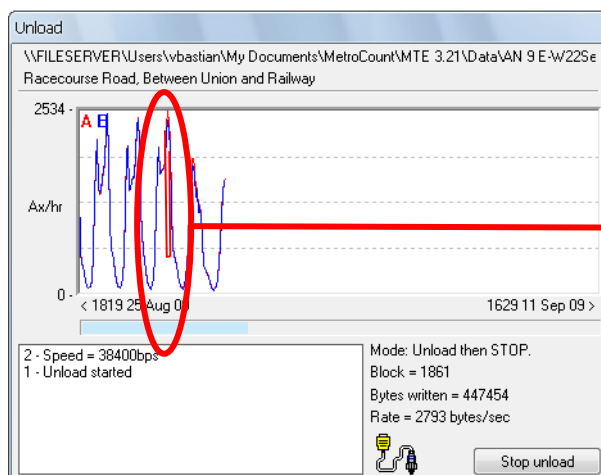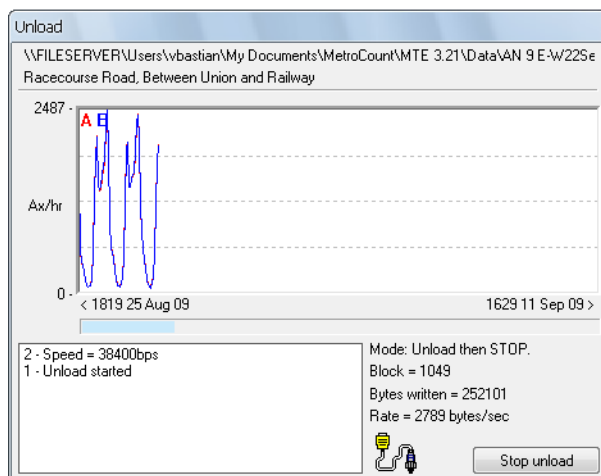

Watch the sensor balance plot as your data unloads. Immediately spot sensor imbalance, indicating a possible tube fault.

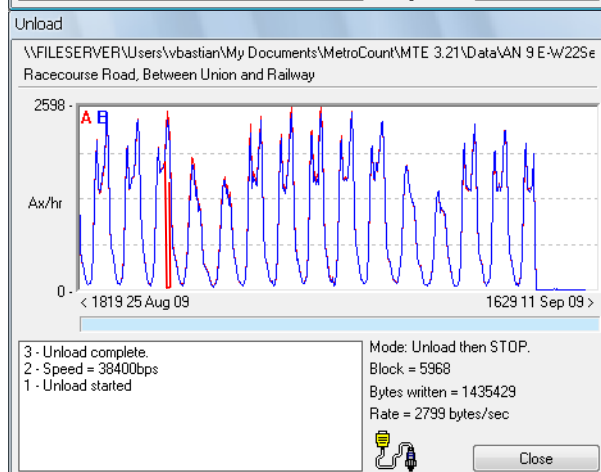

6 Survey Management with Site Lists

MCSetup's site lists are recommended for MetroCount users who:

- § repetitively survey the same sites,
- § want to save time by reducing or eliminating data entry in the field,
- § employ field operators reporting to a survey manager,
- § want to provide their customers with consistent site details,
- § provide their MetroCount reports for use by other computer systems, or
- § enable their clients to furnish pre-compiled, ready-to-run survey programs.

Site lists are created in a similar fashion to setting up an individual site.

A site list is a text file (eg MySites.sit) which contains all the setup parameters required to operate your MetroCount Roadside Units.



To create a new site list

1. Open MCSetup and click File » New site list...
2. Enter a name for your new site list (do not change the ".sit" extension).
3. Click Save.

To open an existing site list

1. Open MCSetup and click File » Open sites...
2. Click on the desired site list file.
3. Click Open

A site list window appears in MCSetup as follows:

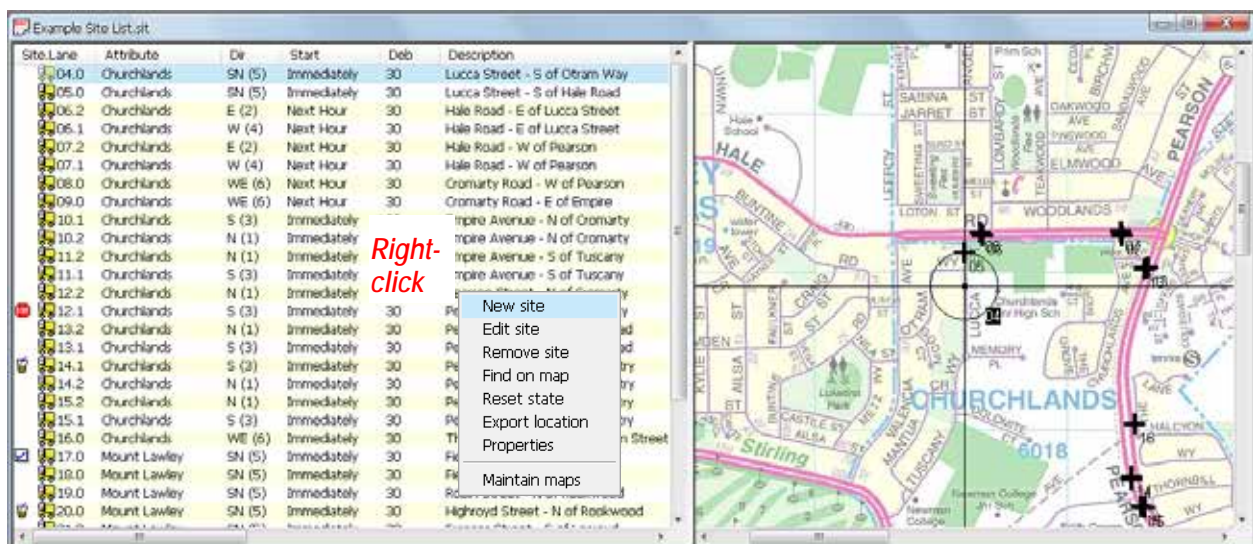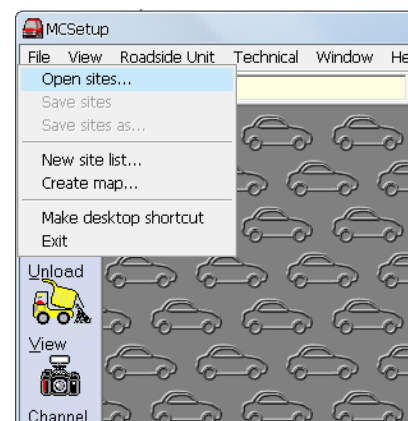

Site Details

Map display

NOTE: Maps are NOT important here. Even without maps, site lists are VERY useful.

To create a new blank site


1. Scroll to the bottom of the Site Details.
2. Right-click immediately below the last listed site, and click New site.
3. Click Next to confirm New site entry.

A blank site data entry form will be displayed.

To create a new site, based on an existing entry.

1. Scroll to the site list entry to be used.
2. Right-click the selected site, and click New Site.
3. Click Next to confirm New site entry.

A site entry form will be displayed already populated with the existing values.

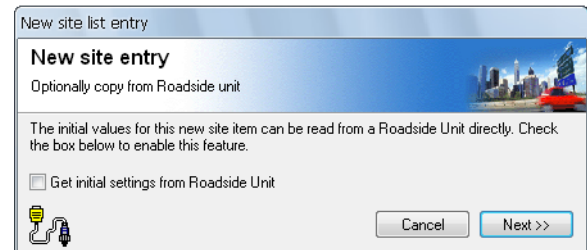


New site list entry

New site entry

Optionally copy from Roadside unit

The initial values for this new site item can be read from a Roadside Unit directly. Check the box below to enable this feature.

☐ Get initial settings from Roadside Unit


 Cancel Next >>

NOTE: This technique is very handy for rapidly creating multi-lane sites, where the only value that's changing is the Lane number.

NOTE: You can create a new site using parameters already programmed into a Roadside Unit. To do this, connect your RSU to your computer, and at the New site entry dialog, check "Get initial settings from Roadside Unit".

Site List Data Entry Form

The site list data entry form is identical to the RSU Setup form (see previous section). But instead of programming a MetroCount RSU directly, the information you enter is saved in your site list.

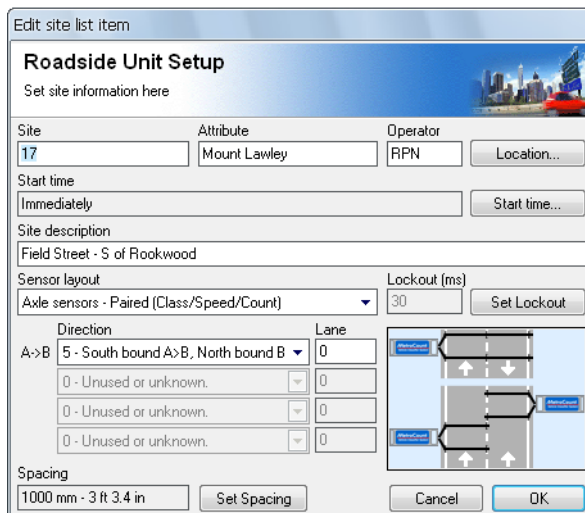

Edit site list item

Roadside Unit Setup

Set site information here

Site: 17 Attribute: Mount Lawley Operator: RPN Location...

Start time: Immediately Start time...

Site description: Field Street - S of Rookwood

Sensor layout: Axle sensors - Paired (Class/Speed/Count) Lockout (ms): 30 Set Lockout

Direction: A->B 5 - South bound A->B, North bound B Lane: 0

0 - Unused or unknown. 0 0 0

0 - Unused or unknown. 0 0 0

0 - Unused or unknown. 0 0 0

Spacing: 1000 mm - 3 ft 3.4 in Set Spacing

Cancel OK

Entering data into a site list is exactly the same as programming an individual site.

But, you only have to do it ONCE!


Programming a Roadside Unit Via a Site List

Starting a survey via a site list is very simple:

1. Open your site list and connect your computer to your RSU.
2. Click on the site you wish to install, highlighting its entry.



3. Click the large Setup button. The following information will be displayed.

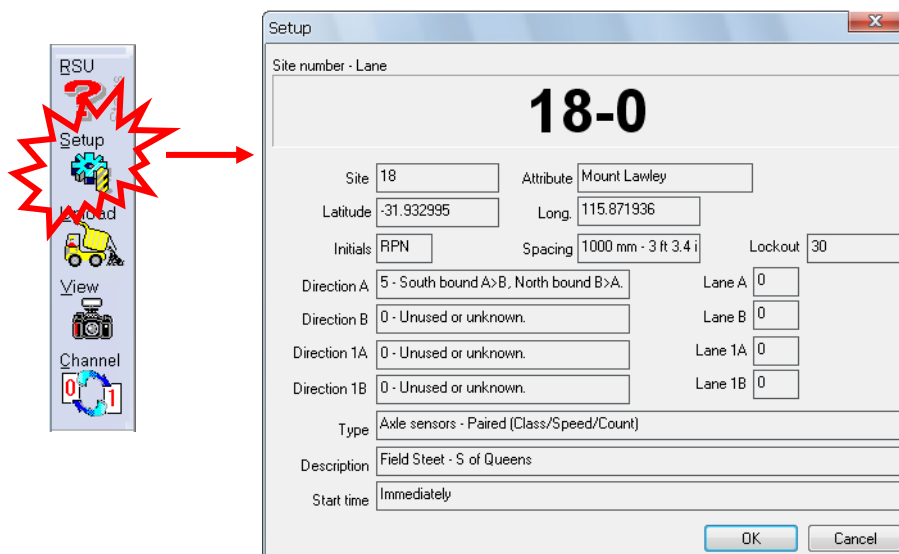

4. Confirm setup by clicking OK. All your site information is transferred to the RSU, and logging will commence according to your programmed start time.
5. Check the RSU Status and View traffic as required.

“State” Icons

When using site lists, MCSetup helps you keep track of your survey progress by displaying small icons next to the site list items.



Survey has commenced (eg start of survey).



Site data unloaded (eg mid-survey check).



Site data unloaded and RSU stopped (eg end of survey).

To reset the state of a site


Right click the site, then click Reset state.

	12.2	Churchlands	N (1)	Immediately	30	Pearson Street - N of Cromarty
	12.1	Churchlands	S (3)	Immediately	30	Pearson Street - N of Cromarty
	13.2	Churchlands	N (1)	Immediately	30	Pearson Street - S of Hale Road
	13.1	Churchlands	S (3)	Immediately	30	Pearson Street - S of Hale Road
	14.1	Churchlands	S (3)	Immediately	30	Pearson Street - N of ECU entry
	14.2	Churchlands	N (1)	Immediately	30	Pearson Street - N of ECU entry
	15.2	Churchlands	N (1)	Immediately	30	Pearson Street - S of ECU entry
	15.1	Churchlands	S (3)	Immediately	30	Pearson Street - S of ECU entry
	16.0	Churchlands	WE (6)	Immediately	30	The Lane - Entry from Pearson Street
	17.0	Mount Lawley	SN (5)	Immediately	30	Field Street - S of Rookwood
	18.0	Mount Lawley	SN (5)	Immediately	30	Field Street - S of Queens
	19.0	Mount Lawley	SN (5)	Immediately	30	Robin Street - N of Rookwood
	20.0	Mount Lawley	SN (5)	Immediately	30	Highroyd Street - N of Rookwood
	21.0	Mount Lawley	SN (5)	Immediately	30	Highroyd Street - S of Rookwood

New site
 Edit site
 Remove site
 Find on map
 Reset state
 Export location
 Properties
 Maintain maps


NOTE: You can change the state of several sites at once, by selecting them all as a group (i.e. shift + click), then clicking Reset state.

7 MCReport's "File Tree" for Data Management

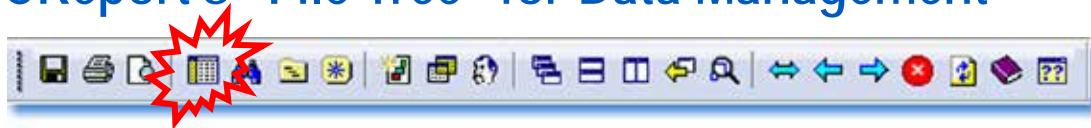

MCReport's File Tree has specifically designed features that aid MetroCount data management and for checking data quality prior to analysis.

The File Tree is based on a File View Window. Each File Tree has two panels – on the left is the Tree View showing folder hierarchy, and on the right the List View showing the survey parameters of your MetroCount datasets in the currently selected folder. The File Tree is the component of MTE used to manage MetroCount datasets. The File Tree allows you to manage and locate your MetroCount datasets more efficiently than using other common file management utilities.

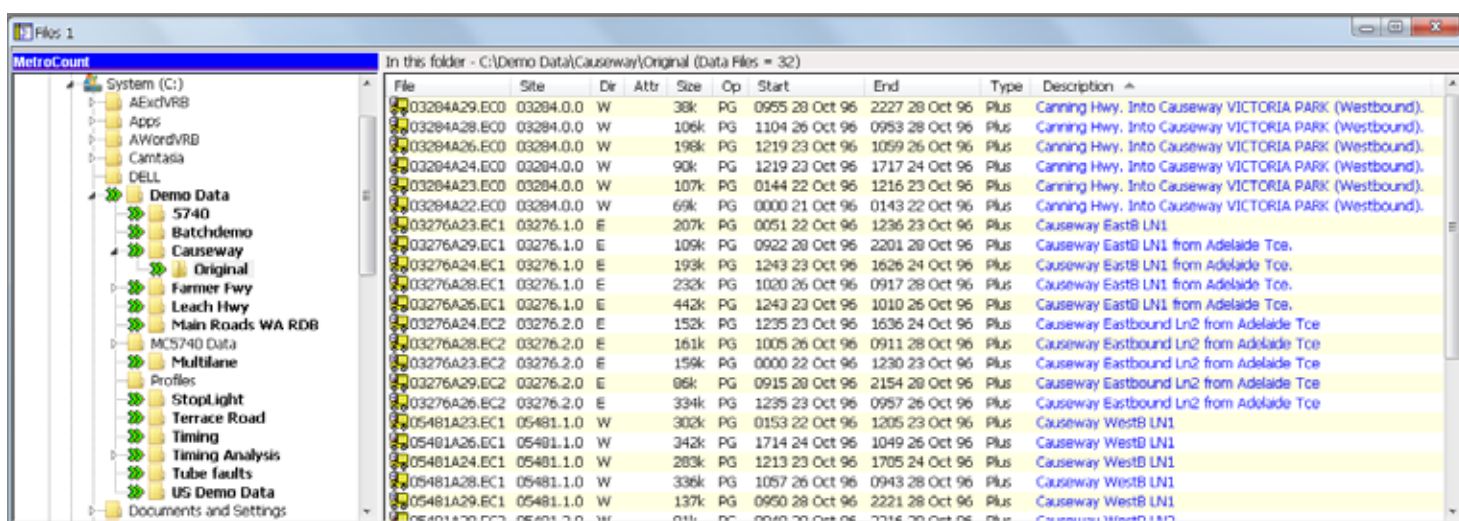

The File Tree's appearance is similar to Windows' "Explorer" file management utility. The File Tree, however, is solely for exploring, managing and checking MetroCount data.

The File Tree displays and identifies MetroCount datasets in a user-friendly fashion:


- § The green double chevron is visible when a folder contains a MetroCount dataset.
- § Rather than listing datasets by their physical attributes, such as name, size and so on, the File Tree lists MetroCount datasets by their survey attributes, such as site ID, start and finish times, and site description. This removes the need to create file names that uniquely identify data from a given site.
- § You can browse folders and transfer datasets using multiple windows.
- § You can copy datasets by dragging and dropping the dataset into the destination folder.
- § You can rename a dataset, or delete a dataset via the right-click pop-up menu.

Pop-up Menu

Right-click to access the File Tree's key features via the pop-up menu:

*Right-click, left side...
Folder pop-up*


*Right-click, right side...
File pop-up*

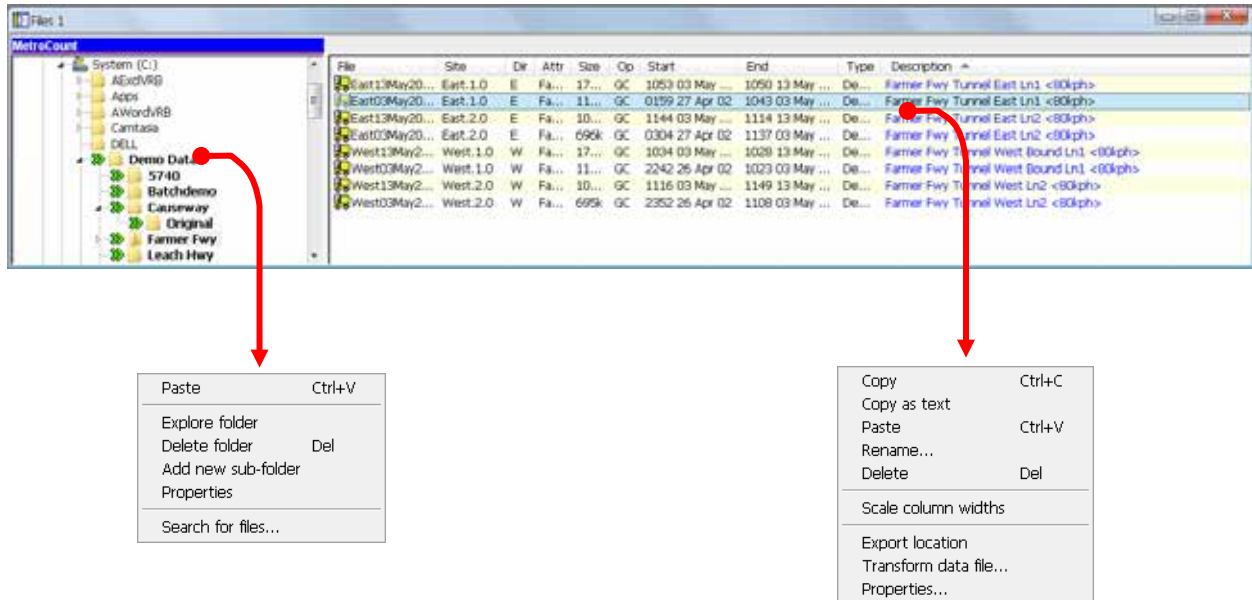

Setting Favorite Folders




To set a Favorite folder, highlight its name by clicking the left side tree view, then click the "Favorites" button in the toolbar.

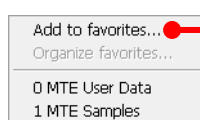


Click the Favorites button to:

- Add a folder to your favorites,
- Organise your favorite folders,
- Quickly jump to your favorite folder.

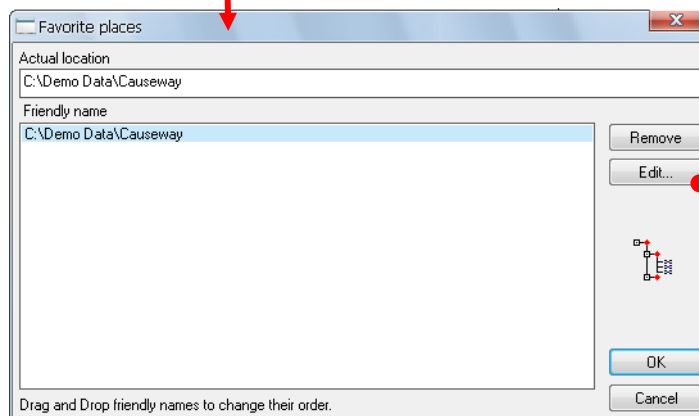


When organising your favorites, click "Edit" to give it a user-friendly name.

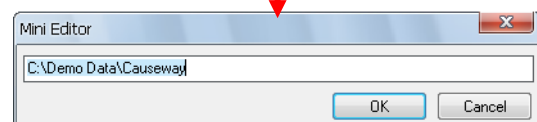

Searching for Data



wish to examine, then click the Search button. All MetroCount dataset header parameters are available for searching.

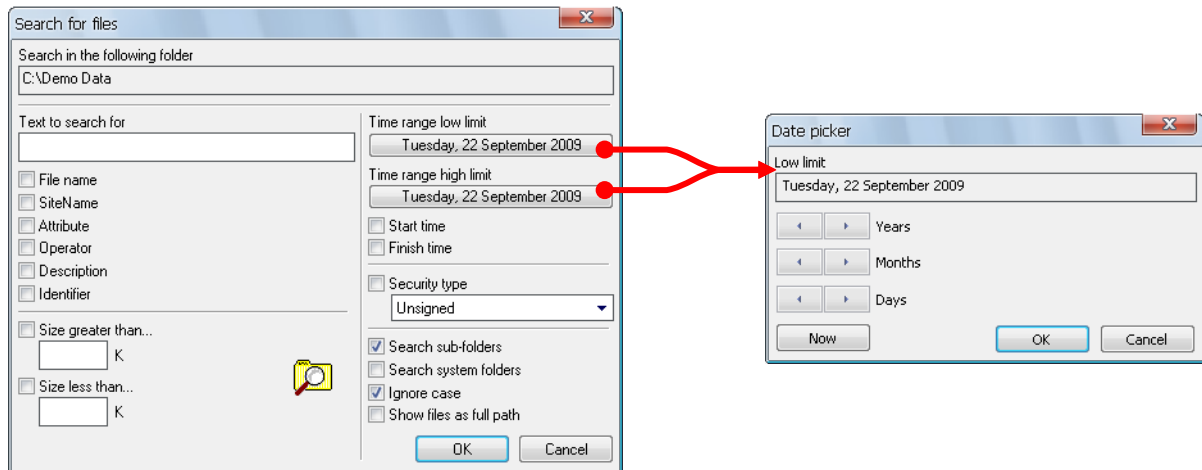


Editing Dataset Header Parameters

Right-click a dataset, click “Transform data file...” in the pop-up menu.


The File Tree allows you to edit the survey header parameters of MetroCount datasets. This is particularly useful if operator errors occur during setup.

If you edit your survey parameters, an exclamation mark (!) will be inserted at the start of the Site Description. Further editing will continue adding exclamation marks – you can remove them, but you’ll always end up with at least one. This is an accountability feature.

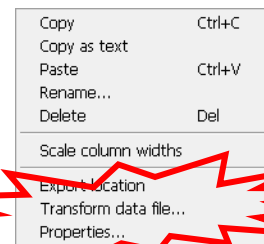


NOTE: You can’t edit or change recorded data.

NOTE: NEVER load or edit your MetroCount data or header details with any other non-MetroCount application (eg Word). This will most likely corrupt the binary structure of your datasets, and will invalidate the Signature, rendering the dataset useless with MetroCount software.

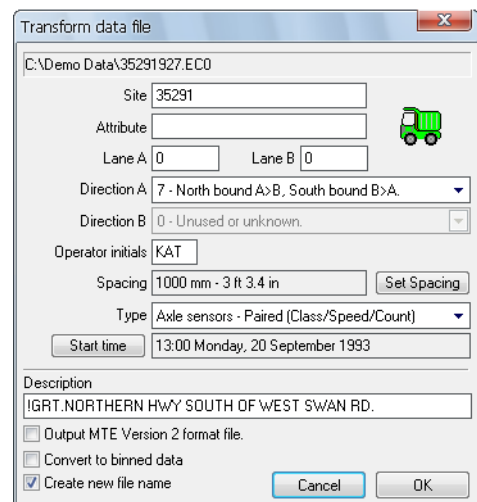

Checking Data Quality


Double-click a dataset, or right-click, choose Properties...

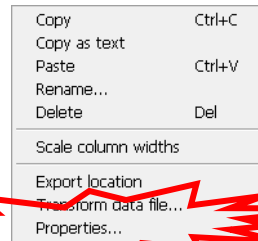


Hit Balance

The File Tree provides an Axle Hit Balance raw data plot and can be found on the Hits page in the dataset properties dialog box. The Axle Hit Balance provides an extremely fast and efficient way for evaluating data quality.

The Axle Hit Balance is used for identifying periods of sensor failure during the course of a survey. Ideal data for a classification sensor layout is identified by the A and B sensor plots perfectly overlaying each other. The shape of the plots should also reflect the daily traffic behavior you would expect at the survey site.

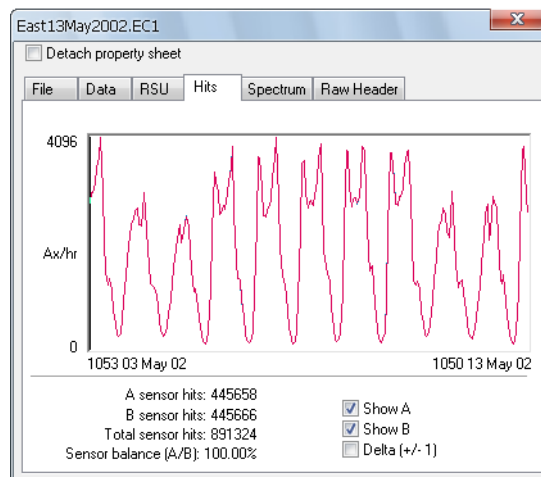

Data problems for a classification sensor layout can be instantaneously recognized by a divergence in the two sensor plots.

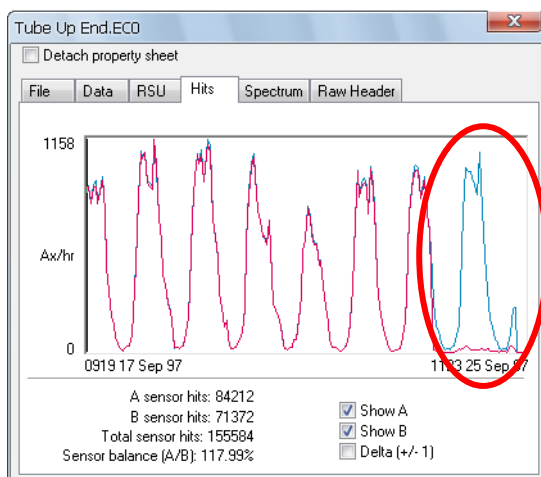


In this case a tube B failure was a result of the tube coming up towards the end of the survey. Detecting this problem gives you the option of setting a time filter in MCRReport or gathering further data if the site is still setup.

Hit Spectrum

The Hit Spectrum is another very powerful tool for assessing data quality. The Hit Spectrum is a histogram of the time *between* sensor hits (that is, it plots all the times when your Roadside Unit was NOT recording axles). Every Hit Spectrum is different for every survey, essentially creating a unique “thumbprint” for that particular survey. All Hit Spectra, however, contain characteristic features.


Anatomy of a Hit Spectrum

Typical Hit Spectrum for good quality data:

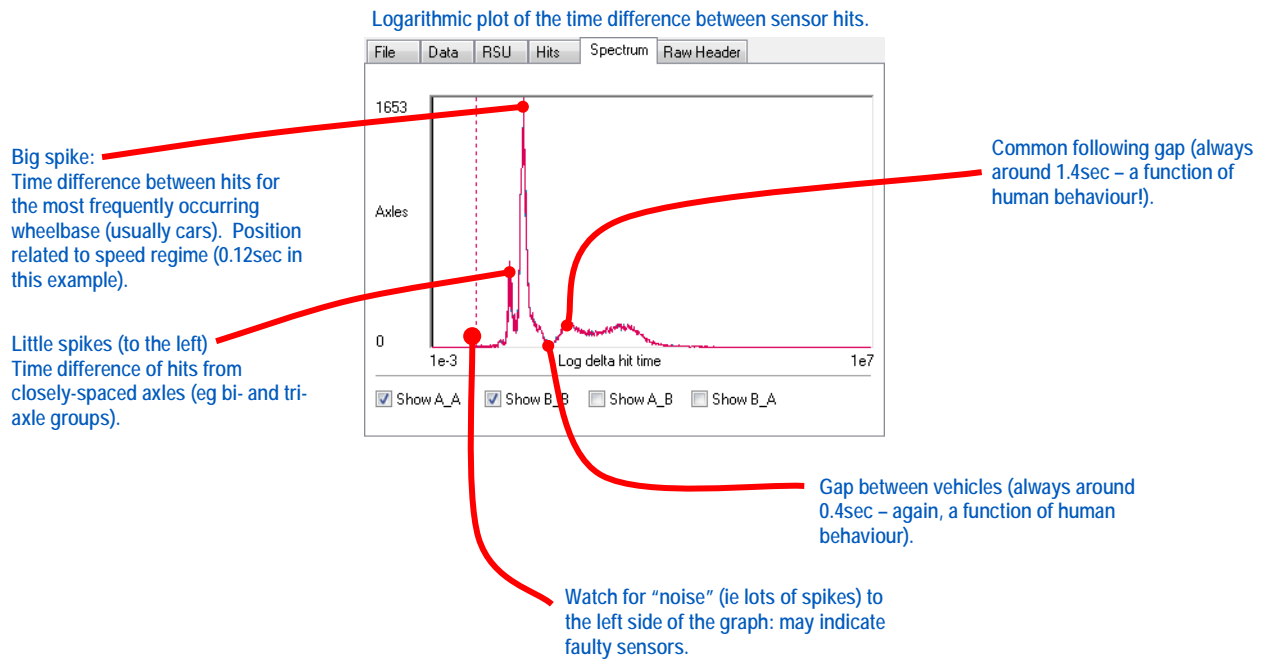


Exercise


Each of the following Hit Balance and Hit Spectrum charts indicate a faulty tube and/or installation. What is the likely cause in each case?

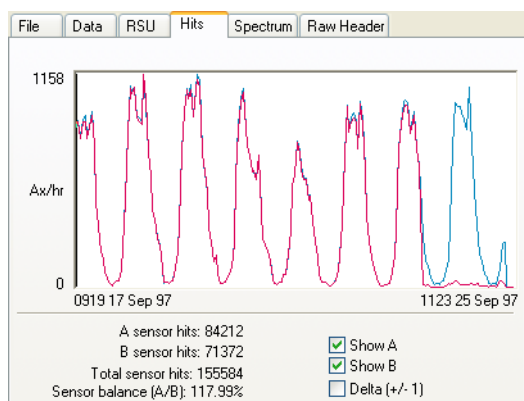


Tube Example 1:

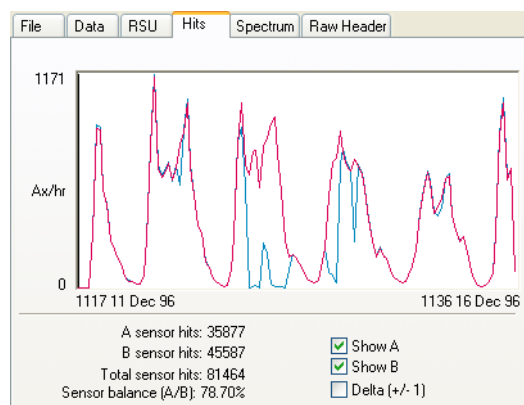

Tube Example 2:

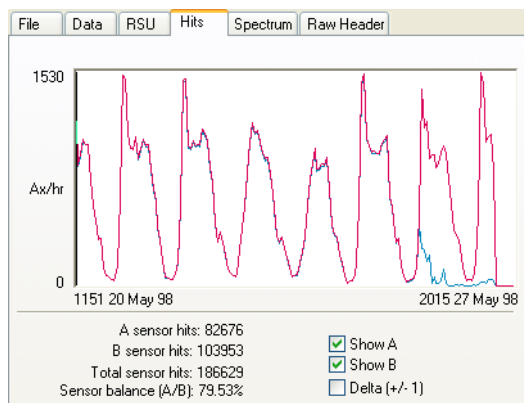

Tube Example 3:

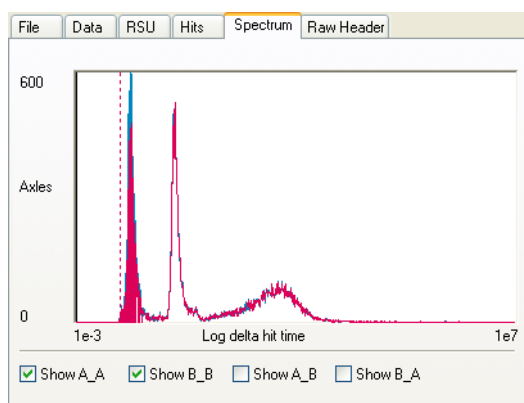

Tube Example 4:

8 MCRpt – Data Analysis Software

Overview


MCRpt is Traffic Executive's data analysis component. MCRpt takes the raw axle stream stored in your MetroCount datasets and interprets the data to produce almost any conceivable report. One survey can give you an enormous amount of information and historical value.

The Report Wizard



MCRpt is amazingly simple to use. The Report Wizard guides you through the process of generating the reports you require. The steps to creating a report are simply:

1. Load the datasets to be analyzed.
2. Tag the datasets to include in the next report.
3. Select the report type.
4. Adjust the report Profile if required.
5. View, format and print the report.

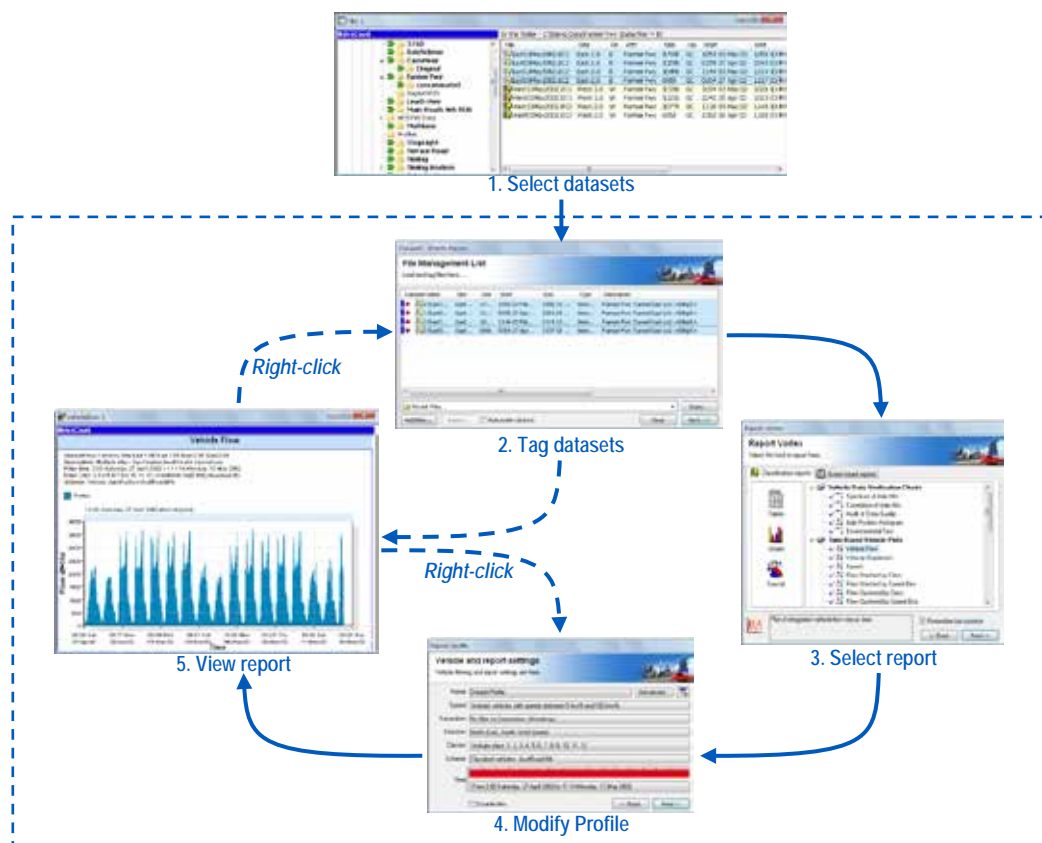


Generating a Report with the Report Wizard

The File Management List



The File Management List dialog box displays a list of datasets that have been loaded into your computer's memory ready to be analyzed. The list itself displays important summary information, essential to identifying a dataset, similar to the File Tree. Datasets are tagged to be used by a report.

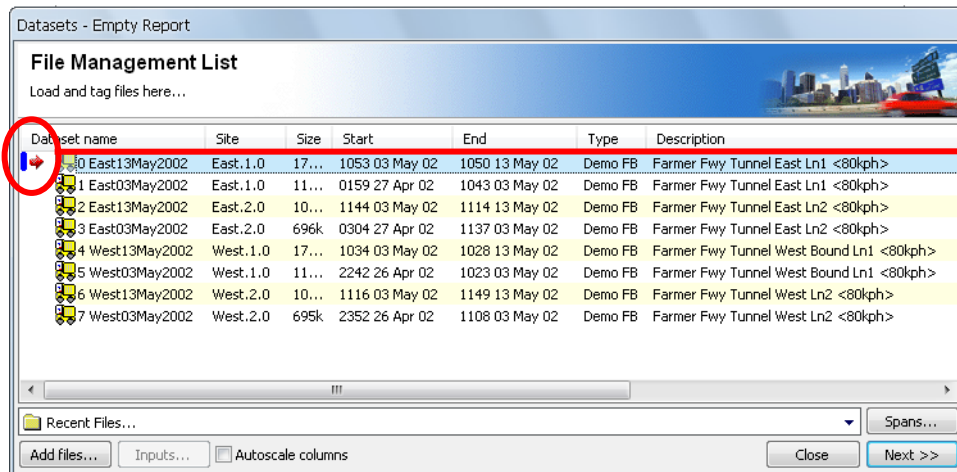

Red arrow shows the dataset(s) tagged ready for the next report.

Blue bar indicates a dataset in use with an open report

Pressing Shift and/or Ctrl allows selecting multiple datasets for combining into one report.


Double click single datasets, or shift-select multiple datasets with right click » tag/untag in the pop-up, to toggle tagging for the next report.

Remove datasets from the File Management list by highlighting their entry, then right-click to display the pop-up menu.

Tag/Untag
Remove
Load algorithm...
Edit algorithm...
Properties...
Show full paths

NOTE: Removing files from the File Management list does not delete them from you system.


Pressing “Spans” displays available data in currently loaded datasets:

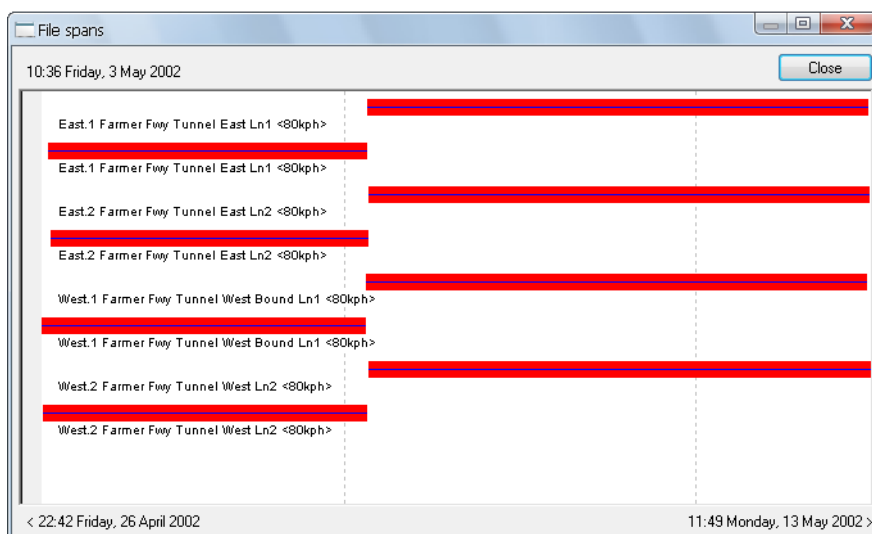

Loading Datasets from the File Tree


The simplest way to load datasets into the File Management list is via the File Tree:

Simply highlight the dataset(s) you wish to analyze (shift-click, ctrl-click), then click the New Report button. If not already loaded, MCRReport will prompt you to load the highlighted dataset(s) for analysis.

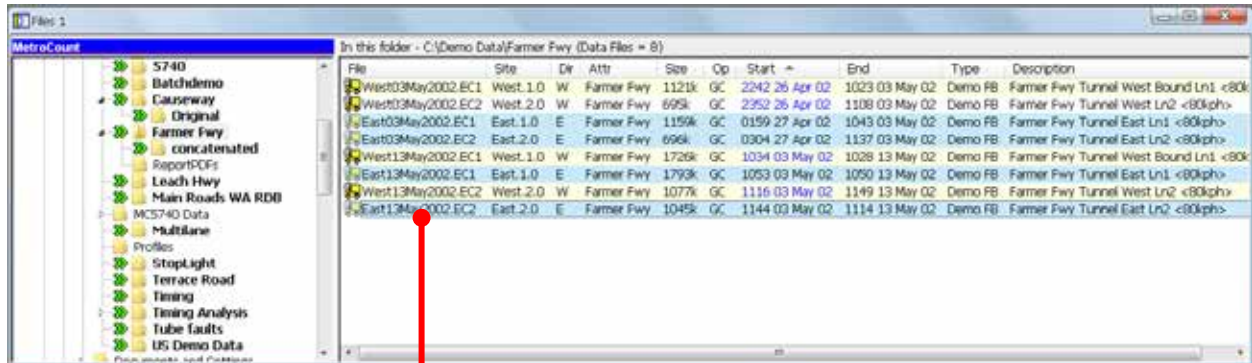


1. Highlight the datasets you want to analyse...

2. Click the New Report button...

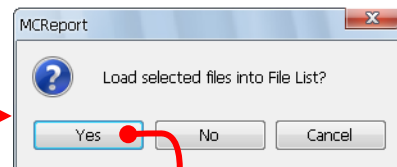

3. Confirm your selection...

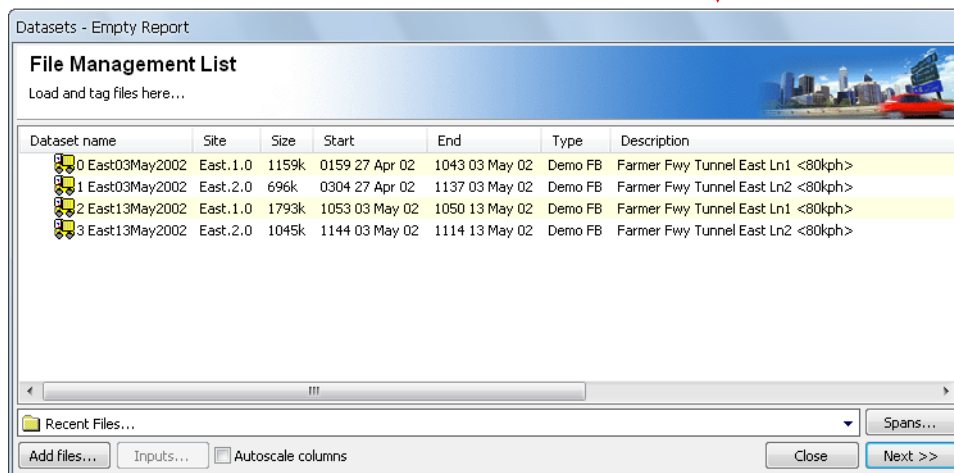


4. Datasets loaded, ready for tagging!

The Report Vortex

MCReport divides the available reports into two fundamental groups.

- § Classification Reports - these reports contain various combinations of common classification parameters, such as volume, class, speed, direction, headway and so on. These reports require datasets that were collected using the Classification (parallel) Sensor Layout.
- § Event Count Reports - these reports are used to produce axle-based reports, such as axle counts and gap analysis. Data from each of the sensors can be interpreted in numerous ways, based on the Sensor Layout used. These reports can be performed on data from both Classification and Count sensor layouts.

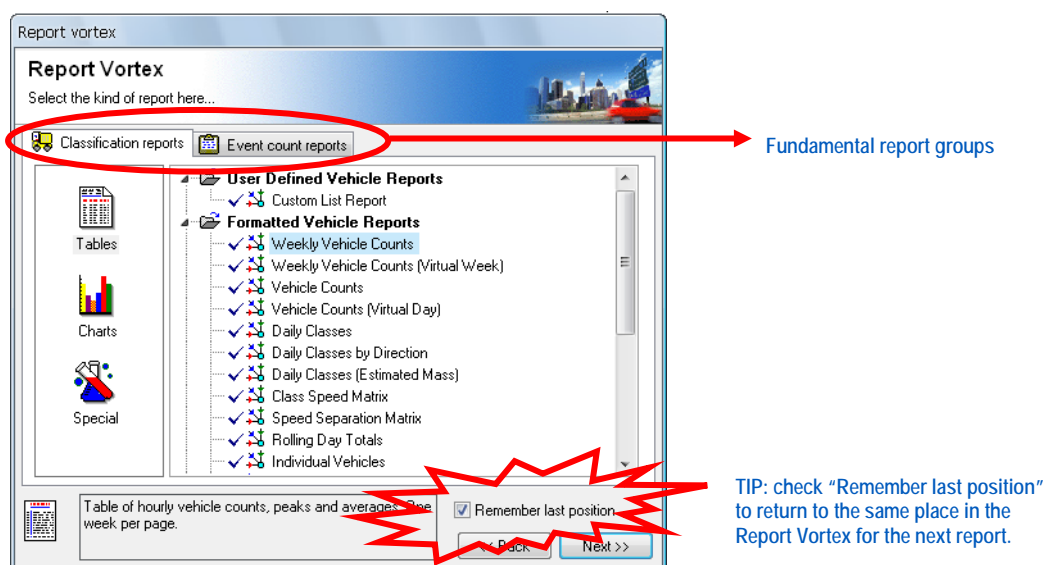

The Report Vortex further sub-divides the available reports according to their formats:



Tables – MetroCount formatted and paginated text reports, such as hourly traffic flows and class percentages.

 


Charts – Graphical reports, such as pie charts, time-based plots, dispersion plots and data audit graphs.



Special – Formats compatible with other systems.



Note the small icons next to each report. Most reports will accept multiple datasets, merging, adding, combining or averaging the statistics as appropriate.



→ Report accepts multiple datasets.

→ Report accepts only one dataset.

Report Vortex: Available Reports (*Plus Level Data*)

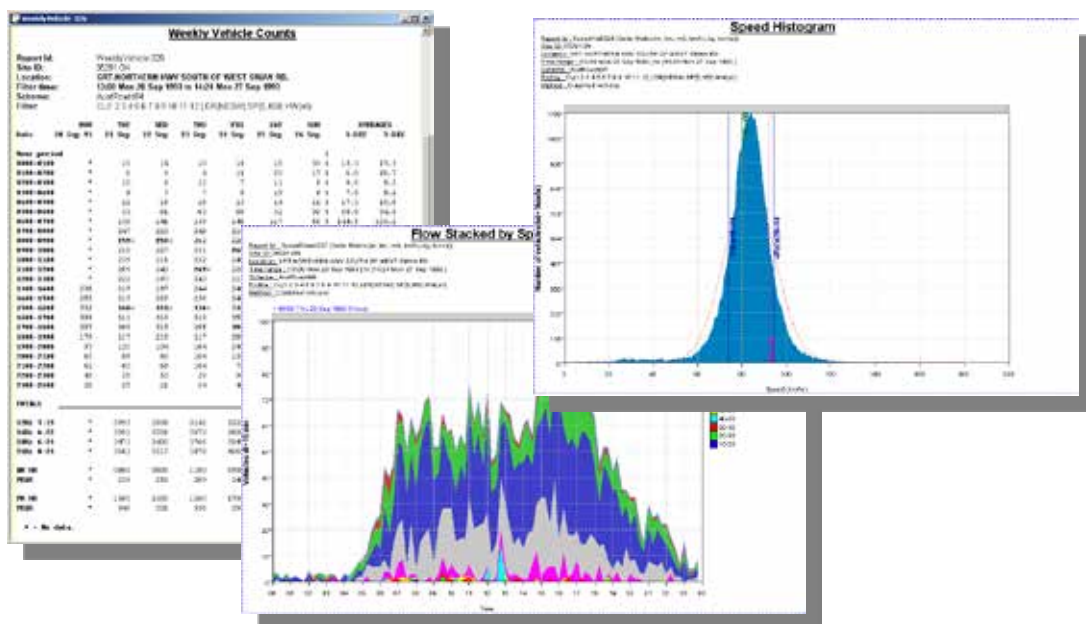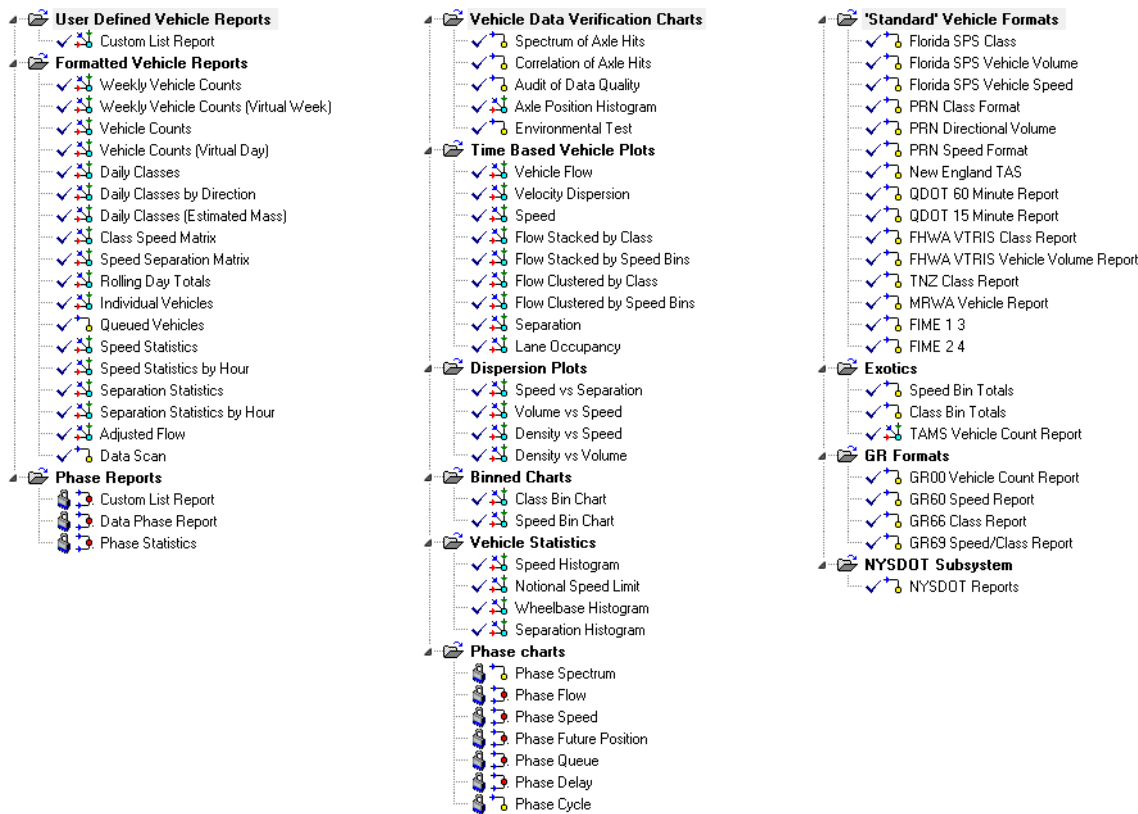

Report Fundamentals

- § All reports are simply “renderings” of the underlying dataset(s).
- § Your data is only “read” by MCReport during analysis; at no stage is data ever written back to your datasets, *i.e. you cannot damage your data with MCReport*.
- § Right-click to edit, recalculate, or set various properties.
- § Reports are editable in MCReport. Edits are lost if you recalculate the report.

Text Reports – Key Features

MetroCount Traffic Executive
Weekly Vehicle Counts

WeeklyVehicle.3 - English (ENA)

Datasets:
 Site: [East] Farmer Fwy Tunnel East Ln1 <800kph>
 Direction: 2 - East bound, A hit first. Lane: 1
 Survey Duration: 1:59 Saturday, 27 April 2002 => 10:43 Friday, 3 May 2002
 Zone:
 File: East03May2002 EC1 (Demo FB)
 Identifier: 250421ZQ MC56-6 [MC56] (c)Microcom 02/03/01
 Algorithm: Factory default (V3 21 - 15275)
 Data type: Axle sensors - Paired (Class/Speed/Count)

Profile:
 Filter time: 2:00 Saturday, 27 April 2002 => 10:43 Friday, 3 May 2002
 Included classes: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12
 Speed range: 5 - 160 km/h
 Direction: North, East, South, West (bound)
 Separation: All - (Headway)
 Name: Default Profile
 Scheme: Vehicle classification (AustRoads94)
 Units: Metric (meter, kilometer, m/s, km/h, kg, tonne)
 In profile: Vehicles = 140420 / 140605 (99.87%)


Weekly Vehicle Counts

WeeklyVehicle.3
 Site: East 1.0E
 Description: Farmer Fwy Tunnel East Ln1 <800kph>
 Filter time: 2:00 Saturday, 27 April 2002 => 10:43 Friday, 3 May 2002
 Scheme: Vehicle classification (AustRoads94)
 Filter: Cts(1 2 3 4 5 6 7 8 9 10 11 12) Dir(NESW) Sp(5,160) Headway(>0)

Hour	Sat 27 Apr	Sun 28 Apr	Mon 29 Apr	Tue 30 Apr	Wed 01 May	Thu 02 May	Fri 03 May	Averages 1 - 5	1 - 7
0000-0100	*	455	167	169	177	206	200	103.8	229.0
0100-0200	*	253	87	83	130	93	123	103.2	128.2
0200-0300	127	142	82	74	76	75	77	76.8	93.3
0300-0400	117	126	76	93	108	104	90	94.2	102.0
0400-0500	155	125	199	197	208	217	201	204.4	186.0
0500-0600	205	223	595	542	567	550	530	556.8	470.3
0600-0700	406	384	1264	1268	1239	1178	1228	1235.4	1008.1
0700-0800	645	456	1888<	1921<	1884<	1854<	1729	1851.6<	1481.3<
0800-0900	795	576	1802	1728	1809	1787	1793	1703.8	1470.0
0900-1000	973	774	1425	1426	1441	1398	1435	1425.0	1267.4
1000-1100	1107	930	1339	1310	1359	1290	955	1250.6	1184.3
1100-1200	1229	1184<	1321	1338	1347	1363	*	1342.3	1287.7
1200-1300	1297	1199	1444	1348	1426	1407	*	1406.3	1359.5
1300-1400	1261	1141	1204	1377	1400	1466	*	1406.8	1338.2
1400-1500	1176	1204	1454	1470	1428	1510	*	1465.5	1373.7
1500-1600	1134	1186	1698	1620	1678	1659	*	1663.8	1495.8
1600-1700	1359	1190	1800	1833	1858	1856	*	1836.8	1650.7
1700-1800	1415<	1219<	1975<	2011<	1990<	1902<	*	1989.5<	1765.3<
1800-1900	1063	919	1255	1325	1322	1318	*	1305.0	1200.3
1900-2000	865	619	782	958	989	923	*	913.0	856.0
2000-2100	649	551	648	707	724	775	*	713.5	675.7

- § All text reports are displayed in “Rich Text Format” (RTF), and are thus fully editable.
- § Reports may be saved in RTF or as raw ASCII text (TXT).
- § Select all or parts of the report to copy to other Windows applications (eg Word).
- § Select text then right click to edit fonts, etc.

Graphical Reports – Key Features

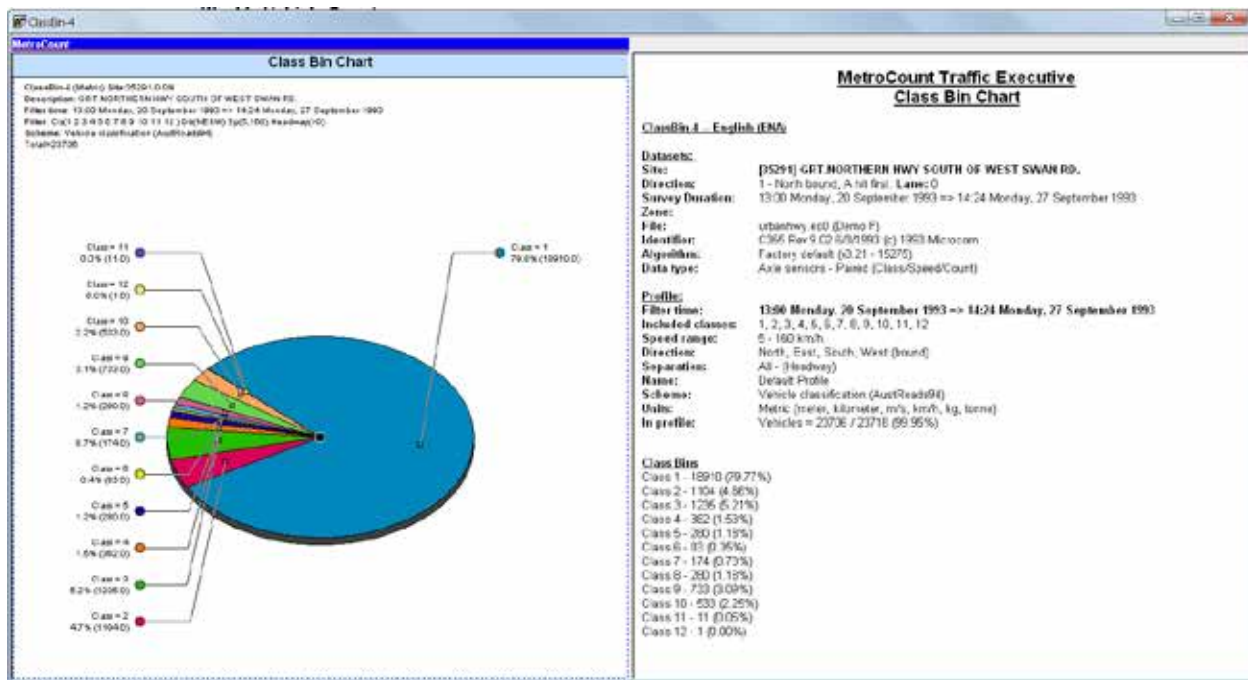


Graph pane

Text pane

- § All graphical reports are displayed in a “split screen”, with the graph on the left, and text summary on the right.
- § All graphs and charts are displayed in Windows Metafile format (WMF) and thus may be copied to other Windows applications, with all text and graphics fully scalable.
- § Click anywhere in the left-hand graph window to copy or print the graph.
- § Click anywhere in the right-hand text window to print the text.
- § Note that the blue MetroCount bar moves to the selected window to indicate that it is active.
- § Right-clicking either window will display an appropriate pop-up menu.
- § All graphs have a default rendering, which may be changed via the Graph menu.

Right-click Menu

An important point to remember is that your MetroCount reports are not static whilst open in MCReport. The key to MCReport's immense flexibility is your right mouse button. Right-clicking within a text report or graph provides a range of options relevant to that report.

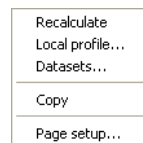

To recalculate a report

Right-click a report and select Recalculate from the pop-up menu. This option will regenerate a report, returning it to its initial state.

NOTE: Recalculating a report will remove any manual formatting or editing you have performed. Consider cloning a report to produce a recalculated copy of a report, while retaining the original

To edit a report's Local Profile

Right-click a report and select Local Profile from the pop-up menu.

Modify the report's Local Profile as required and click the OK button. The report will be automatically recalculated.

To change the datasets included in a report

Right-click a report and select Data sets from the pop-up menu. This option will display the File Management List, with the data sets in use by the current report tagged. Modify the tagged datasets as required, and click the OK button. The report will be automatically recalculated.

Report Cloning



The report cloning feature of MCReport will generate a duplicate of the currently active report with an identical, but independent profile. This provides a quick method for comparing reports. You can clone a report and modify the new report's Local Profile.

To clone a report

Select a report and click the Clone report button on MCReport's main toolbar or select File » Clone report.

Arranging Reports




There are a number of report window arrangement options available on MCReport's main toolbar, including tiling and cascading. These become extremely useful when comparing multiple reports.

Graph Rendering


Many of the graphical reports have multiple rendering options. Most reports default to the most appropriate rendering for that given report, however you may wish to experiment with the available options to see which gives the best representation of your data.

To change the rendering style of a graphical report

1. Activate the graph pane of a graphical report by clicking anywhere within that pane. The active pane is represented by the blue MetroCount bar at the top of the pane.
2. Select Graph » Rendering followed by one of the rendering options. The current rendering method will have a tick next to it in the menu. Note that the list of available renderings will vary depending on the type of graphical report you are changing.
3. The graph will be automatically re-drawn with your new rendering option.

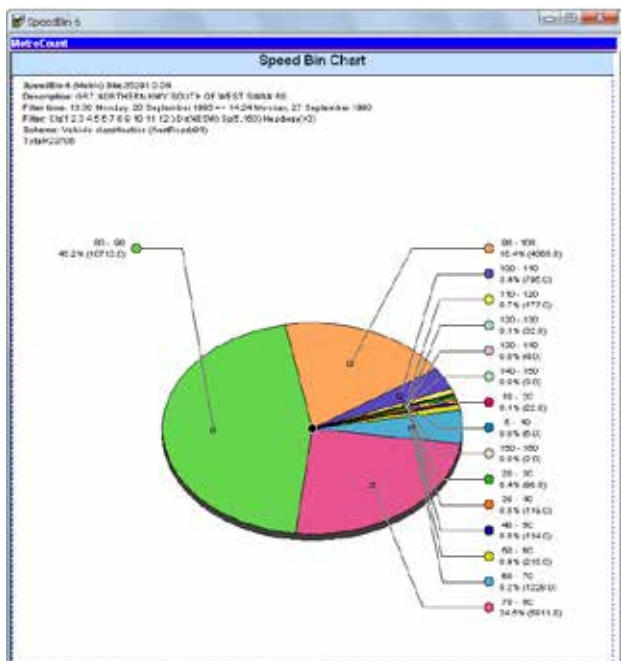

Pie Chart...

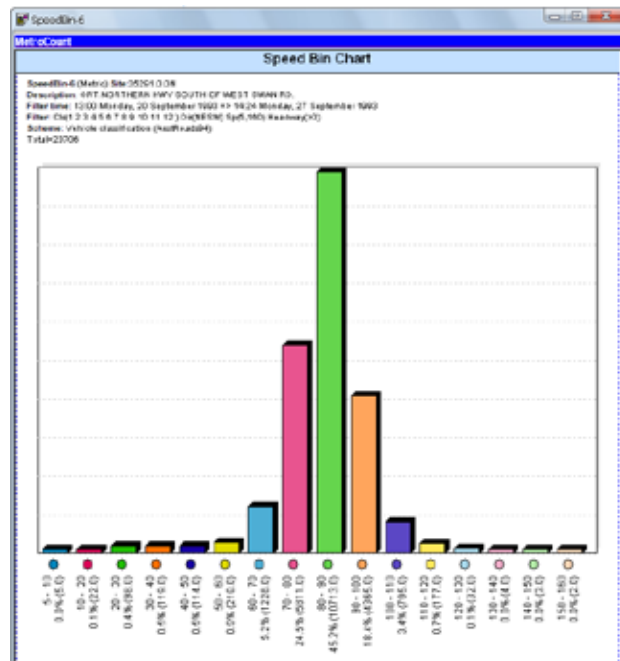


Bar Chart

Dispersion Plots

MCReport has several dispersion or scatter plots:

- § Speed vs. Separation.
- § Volume vs. Speed.
- § Density vs. Speed.
- § Volume vs. Density.

Every vehicle is represented by a single point on the graph with a density color glide specified in the report Profile.

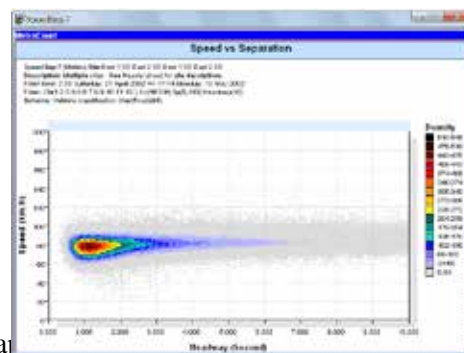


These plots portray differing characteristics of traffic flow, which are normally based on theoretical values in traffic engineering textbooks. They can be very useful when analyzing data on roads that are at or near capacity, or for before and after studies of road works such as traffic calming.

Time Based Plots

MCReport has several time based plots:

- § Vehicle flow
- § Velocity dispersion
- § Speed
- § Flow stacked by Class
- § Flow stacked by Speed Bin
- § Flow clustered by Class
- § Flow clustered by Speed Bins
- § Separation
- § Lane occupancy

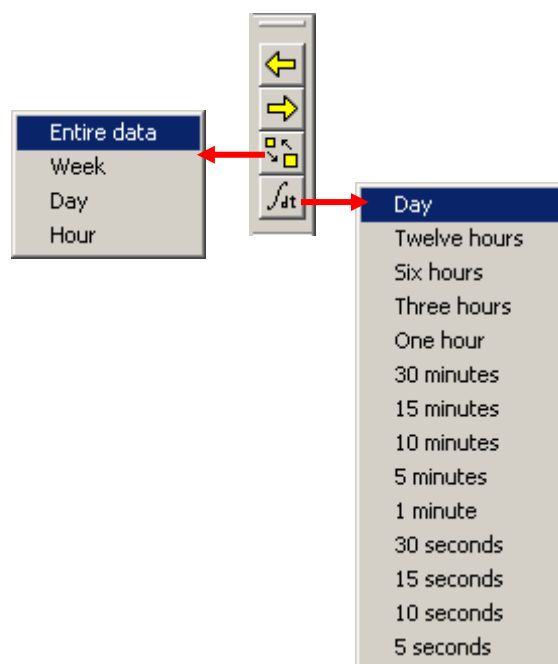

Display Span




The Display Span is the subset of the available data currently shown by a time-based plot. By default, a graph is scaled to display the complete data time span. The Display Span may be changed to a week, day, hour or the entire data time span.


Changing the Display Span requires a marker be placed on the graph at the point you wish to start the new Display Span, and then selecting the size of the span. Note that the new Display Span will start at the nearest boundary to the left of the marker. For example, placing the marker at 4pm on a Tuesday and selecting a day span will start the span from the beginning of Tuesday. If required, the Display span can be set to start from the precise marker location.

To change the Display Span of a time-based plot:


1. Place a marker on the graph at the desired starting point of the new Display Span.
2. Click the Span button on MCReport's graph toolbar and select from Entire data, Week, Day or Hour. The report will be automatically recalculated. To start the new Display Span at the precise marker location, hold the Ctrl key and click the Span button.
3. Use the Back and Forward buttons on MCReport's graph toolbar to step through the data at intervals of the new Display Span.

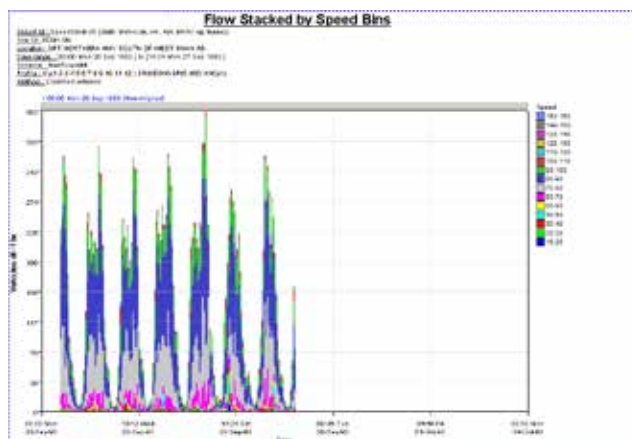


Entire Data

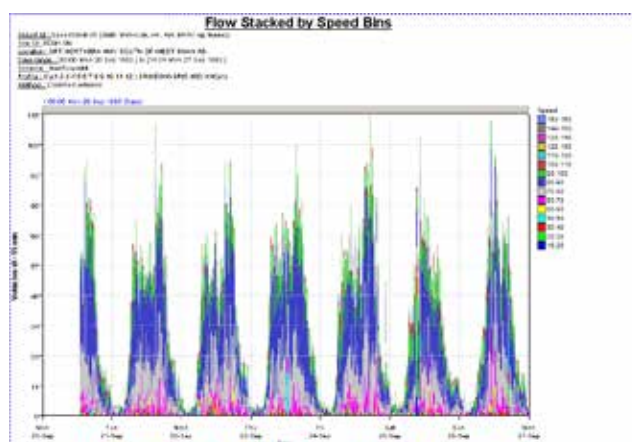

Week

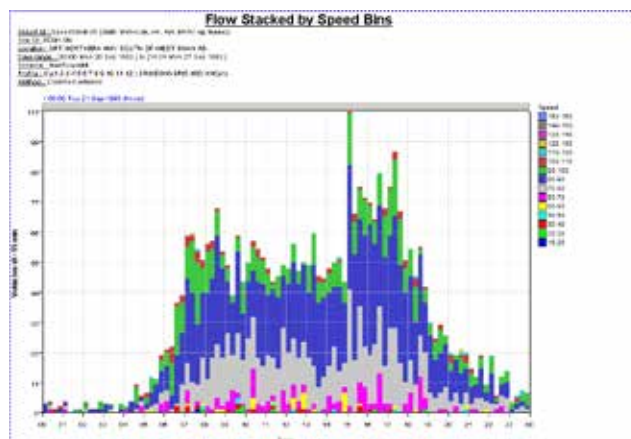


Day

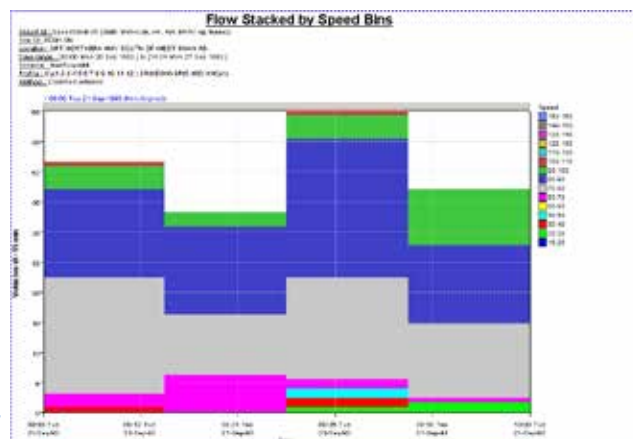

Hour

Integration Time

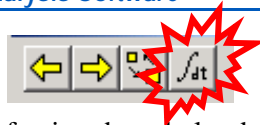


The Integration Time of a time-based plot determines the period of data used to calculate a point on the graph. For example, an Integration Time of 1 hour will place a point on the graph for every hour.


The Integration Time is closely related to the Display Span. If the display span has been set to a day, then an Integration Time of 1 hour will give 24 points on the graph. An integration time of 10 minutes on the same Display Span will give a graph with 144 points, showing much more detail. The best approach is to experiment to determine the combination of Display Span and Integration Time that best presents the information you require.

To change the Integration Time of a time-based plot

1. Activate the graph pane of a graphical report by clicking anywhere within that pane. The active pane is represented by the blue MetroCount bar at the top of the pane.
2. Click the Integration time button on MCReport's graph toolbar and select from the available list of times. The report will be automatically recalculated.

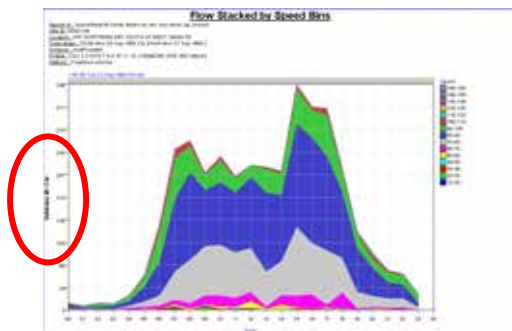

One hour

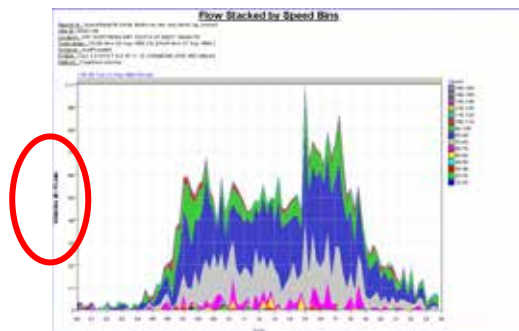

15 minutes

Vertical Scale

By default, MCReport will automatically set the vertical scale for a graph. If required, you can manually set the vertical scale.

To manually set the vertical scale of a graph

1. Activate the graph pane of a graphical report by clicking anywhere within that pane. The active pane is represented by the blue MetroCount bar at the top of the pane.
2. Select Graph » Vert. scale followed by one of the options, described in the table below.
3. The graph will be automatically re-drawn with the new vertical scale.

Event Count Reports


These reports are used to produce axle-based reports, such as axle counts and gap analysis. Data from each of the sensors can be interpreted in numerous ways, based on the Sensor Layout used. These reports can be performed on data from both Classification and Count Sensor Layouts.

9 MCRReport's Report Profile



Report “Profiles” are the key to the power and flexibility of MCRReport. Every report you create has its own Local Profile that encompasses the properties of that report. These report properties include vehicle filter settings, units of measurement, classification scheme, colors, speed bins and statistical settings.

Profiles allow you to set vehicle filter parameters to include only particular vehicles in each report. For example, you can easily produce separate reports for each direction of a bi-directional flow, or you can address more specific problems such as the speed behavior of heavy vehicles.

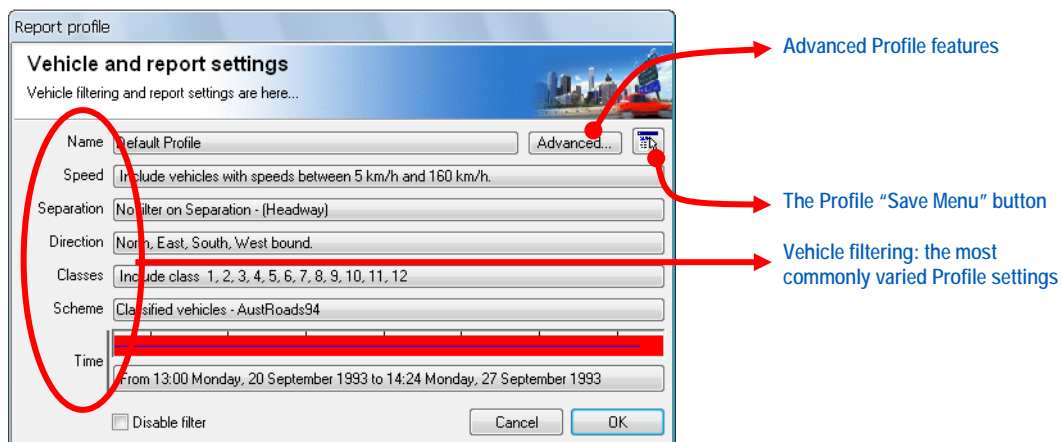

Profiles also allow you to have numerous reports open, each with entirely different properties. For example, you may wish to generate the same type of report using different classification schemes. Perhaps you wish to compare the speed statistics during and after school hours. The possibilities are endless.

NOTE: Set your default profile via **Tools»Edit profile»Default profile** in the main menu.

[illegible]

The key to the power of the MetroCount system!

Vehicle Filter Settings

The most commonly accessed Profile settings are the Vehicle Filter Settings. When producing a classification report the following major filter settings are available:

- § Speed range,
- § Separation threshold as either gap or headway,
- § Traffic flow directions,
- § Vehicle classes, and
- § Time.

Copying a Profile from One Report to Another

1. Edit the Profile of the source report, click the Save menu button and select Edit » Copy. Note that the clipboard where MCReport stores a copied Profile is independent of the main clipboard.
2. Exit from this Profile by clicking the Cancel button.
3. Edit the Profile of the destination report, click the Save menu button and select Edit » Paste.
4. Click the OK button to recalculate the report.

Saving a Local Profile

1. While editing a Profile, click the Save menu button and select File » Save profile.
2. Type in an appropriate name for the Profile in the File name edit box. Feel free to use a relatively long, descriptive file name to easily identify it for future use.
3. Click the Save button to continue.

Loading a Profile

1. While editing a Profile, click the Save menu button and select File » Load profile.
2. Select the Profile you wish to load, and click the Open button.
3. The profile takes the name of the saved Profile name.

Speed Range

Choose the speed range you want to examine.



Separation

Choose your required vehicle separation time, defined as either “headway” or “gap” under the Advanced Profile Speed tab.



Direction

Choose your flow directions. Directions offered for selection are based upon the header details in your dataset(s) being analyzed.



Classes

Choose the subset of vehicle classes you want in your report. Interacts with class “aggregate” option under the Advance Profile Scheme tab.




Scheme

Choose your classification scheme.

Time Filtering


MCReport’s time filtering options let you examine precisely those critical survey times:

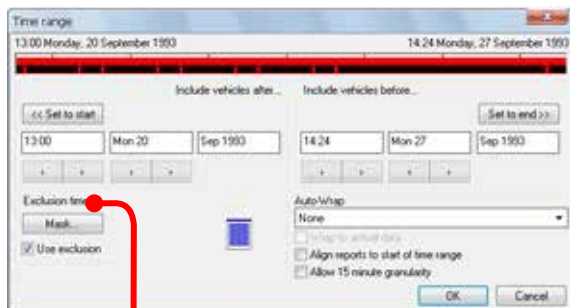

Time filtering.

Select “Auto-Wrap” option for routine analysis.

Click “Mask” to access week mask tool.

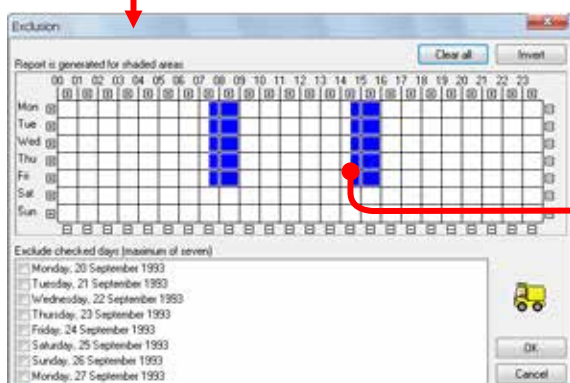

Right-click any hour to access quarter-hour resolution.



Advanced Profile Features

General

Choose metric or non-metric units and nominate weekend days.

Format

Formatting options (eg line thickness for graphs and charts).

Header


Choose the fields to display in the report header. Choose a logo for your reports. Customize report titles and report names.

Colors

Color schemes used in graphs and charts.


Scheme

Choose your preferred vehicle classification scheme.

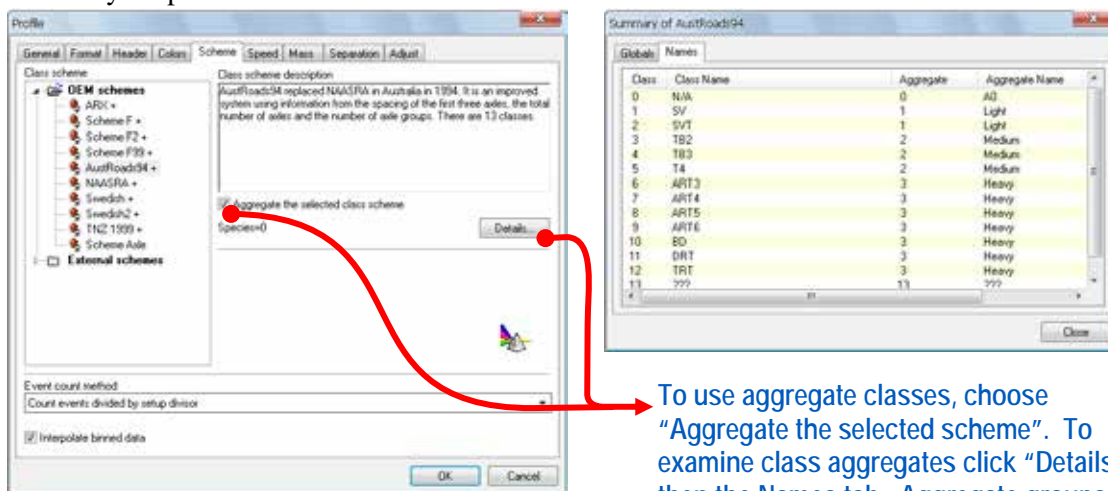

To use aggregate classes, choose "Aggregate the selected scheme". To examine class aggregates click "Details...", then the Names tab. Aggregate groups may be changed by editing the scheme (caution!).

Speed

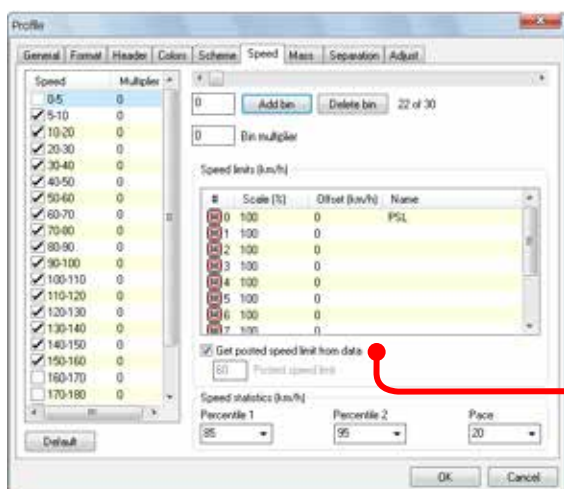

Set speed bins, percentiles (choice of two values) and variable speed limits to display in reports.


Note the option, "Get posted speed limit from data". Put the speed limit in your dataset headers during RSU setup with MCSetup.

Mass

Use regional mass values for each vehicle class to estimate pavement loading.

Separation


Separation is the time offset between vehicles travelling in the same direction. It can be measured as either headway or gap.

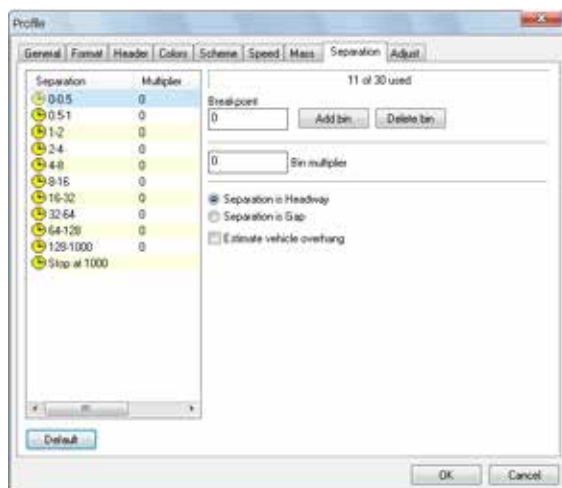

Set separation bins, and define separation in terms of headway or gap.

Headway – time between the first axles of two vehicles travelling in the same direction.

Gap – time between the last axle and first axle of two vehicles travelling in the same direction.

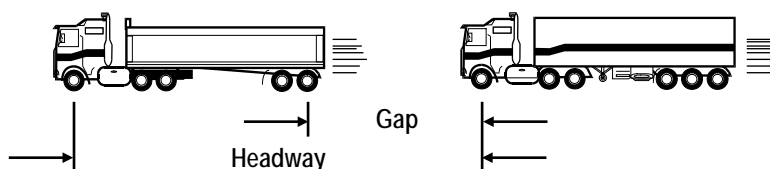


Adjust

A feature for permanent sites.


Profile Example – Speed Bin Chart (metric units)

Default Speed Bin Chart with 10km/hr wide speed bins. Note the majority of vehicles travelling 80 – 90km/hr. Want more detail? Simple...

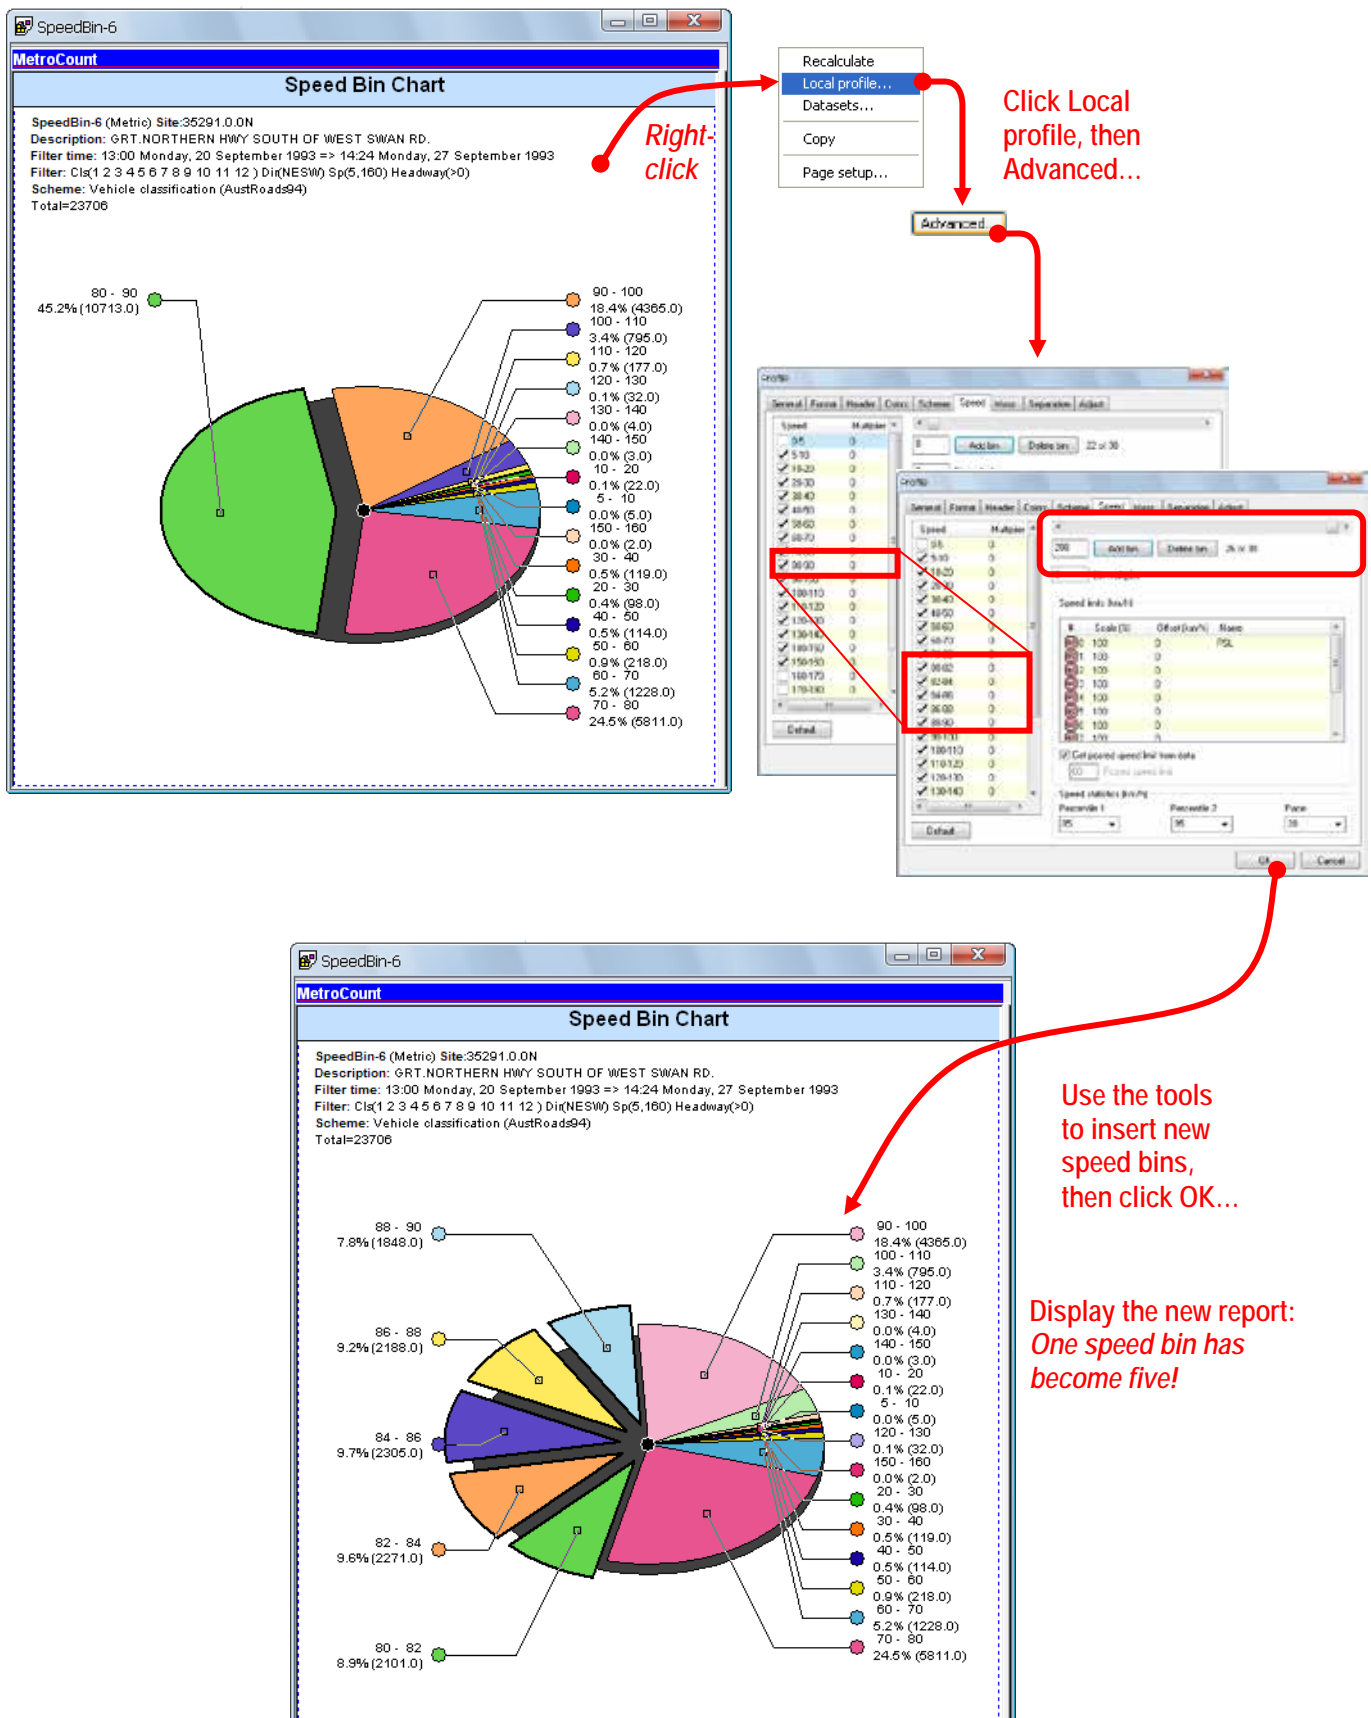

Profile Example – Speed Bin Chart (non-metric units)

Default Speed Bin Chart with 5mph wide speed bins. Note the majority of vehicles travelling 40 – 50mph. Want more detail? Simple...

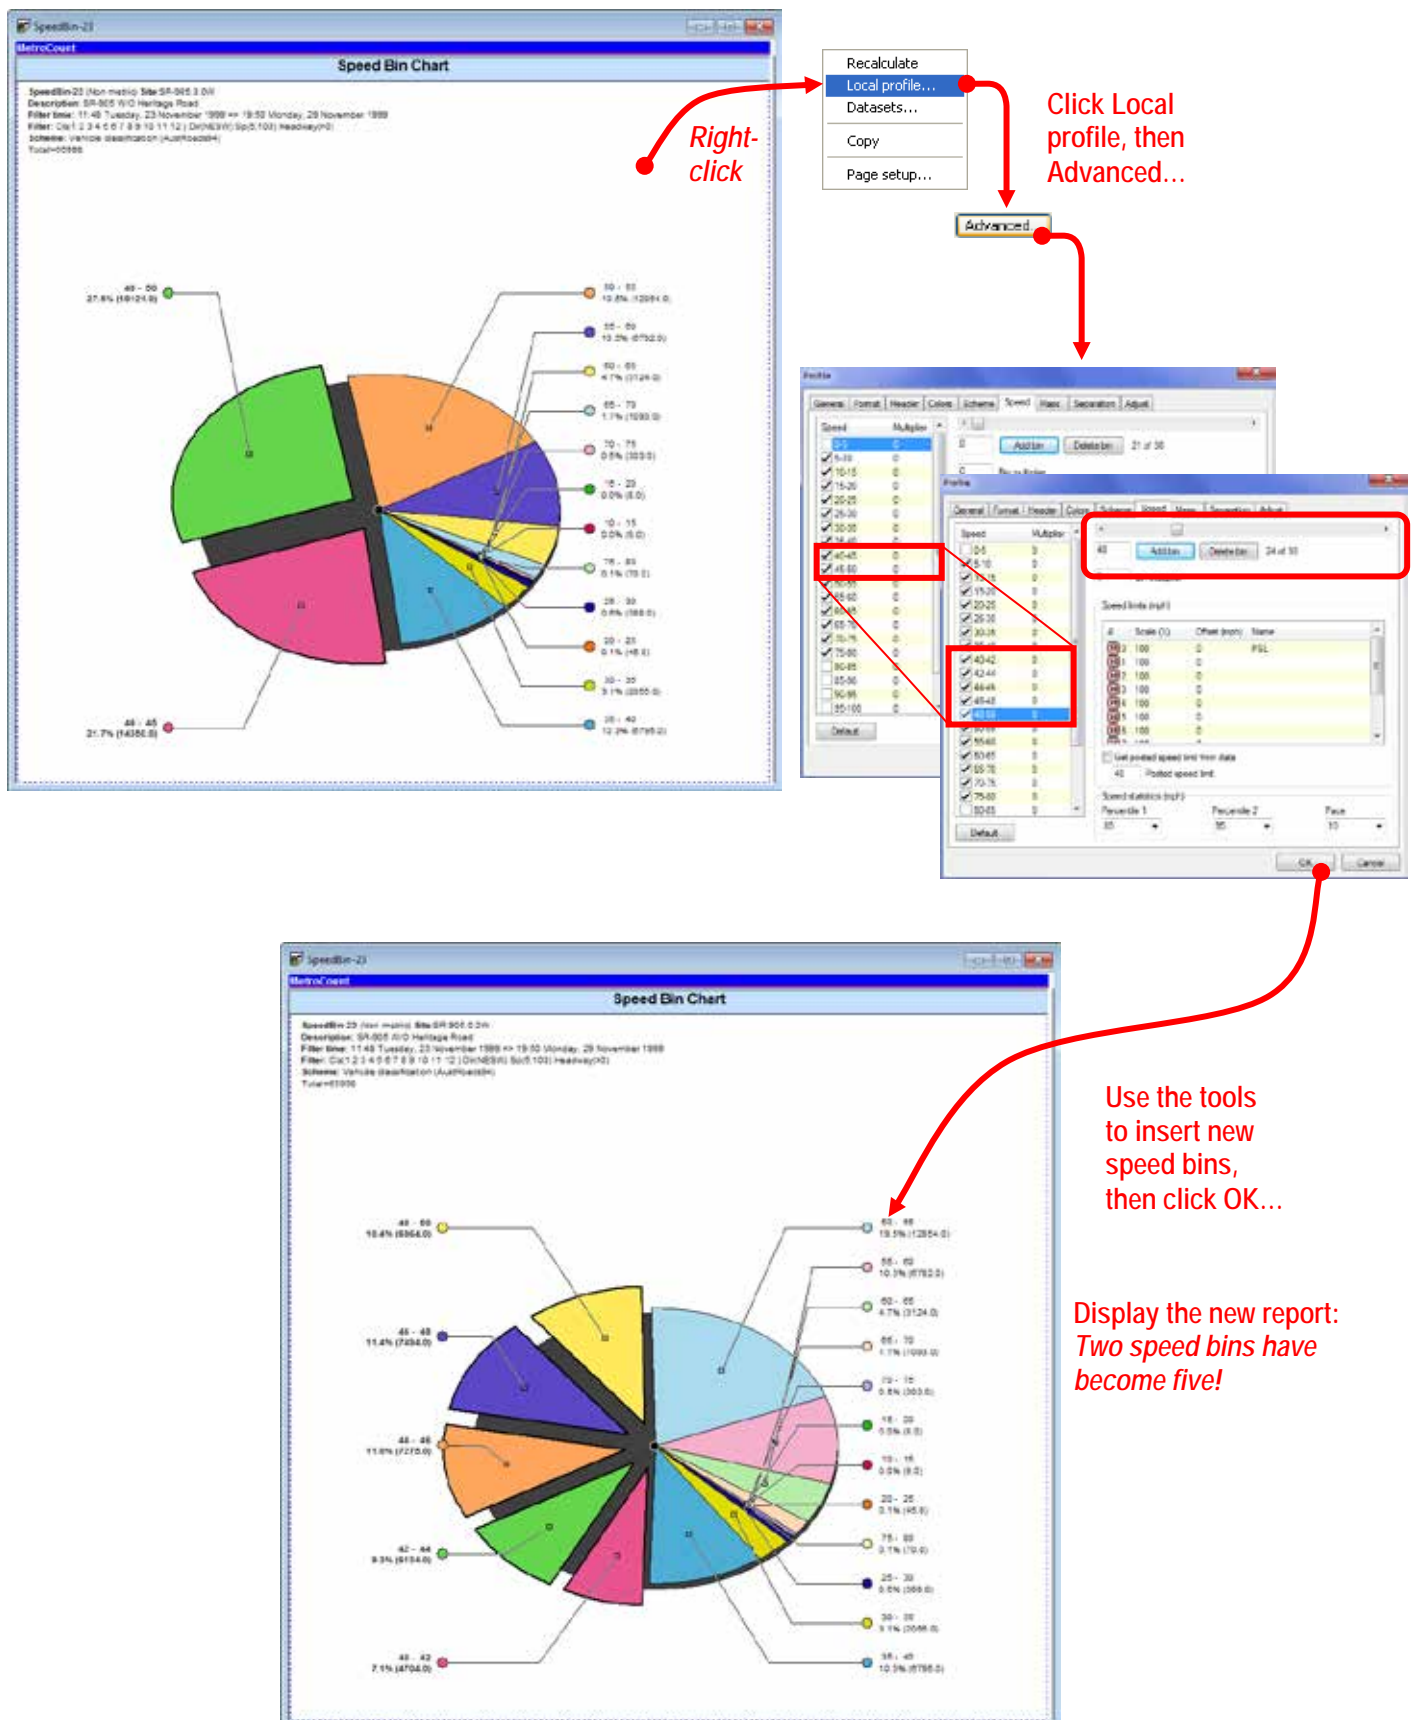


10 MCRReport's Custom Lists

The Custom List report is an extremely powerful tool. Whilst MCRReport's predefined text reports are optimized to meet the most common analysis requirements, the Custom List report goes much further, allowing you to create and save your own report formats.

Custom List Main Menu

This is the initial menu of the Custom List report wizard.

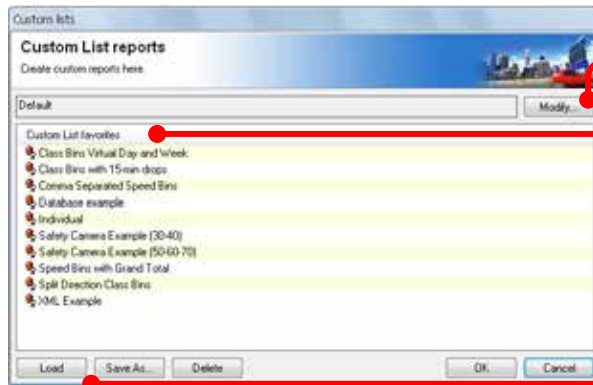

Click Modify to access advanced features.

Create your own Custom Lists templates, then save them for re-use with other data. Double-click your favorite Custom List template to use.

Format Tab




Suppress steps
Five minutes
Ten minutes
15 minutes
20 minutes
30 minutes
One hour
Two hours
Three hours
Four hours
Six hours
Eight hours
Twelve hours
Twenty four hours

Choose your time steps from available options.

Set other formatting options, including "virtual" day and week averaging and various sub-totals and grand totals

Fields Tab

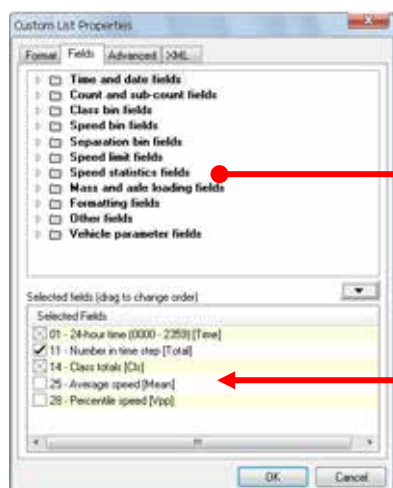


Choose the traffic parameters you want to display in your reports.

Double-click an available field in the upper box, then drag it to your desired position in the lower list.

Check the box next to your selected parameters to display them graphically.

Double-click to select


Advanced Tab

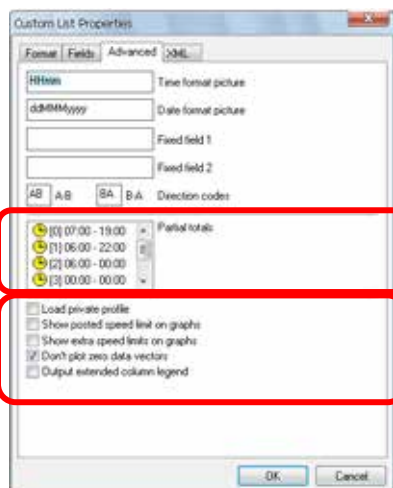

Various advanced options, including user-defined daily subtotals.

Note the “Load private profile” option. Use this to force your Custom List to load a custom Profile of the same name.

XML Tab

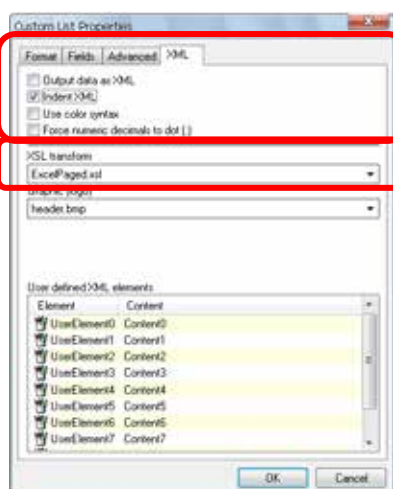

XML options for compatibility with other applications (eg Excel). Choose “Output data in XML”, and your “XSL transform”. Your custom list will then display as XML.

In MCRReport’s main menu, choose “Tools » XSL transform, save and run”, to display your custom list in the selected application.

Custom Lists – Available Fields

Time and Date Fields	01 – 24-hour time (0000 – 2359) [Time] 02 – Packed date and time [YYYYMMDDHHMM] 03 – Full date and time [Date-Time] 70 – ISO8601 date and time (XML) [Date-Time] 04 – Locale time [Time] 05 – Locale short date [Date] 06 – User defined time picture [Time] 07 – User defined date picture [Date]
Count and sub-count fields	11 – Number in time step [Total] 81 – Number in time step (AB) [Total] 82 – Number in time step (BA) [Total] 12 – 15-minute drops (Hour steps only) [Drop] 13 – Cumulative total vehicles [RunTot]
Class bin fields	14 – Class totals [Cls] 15 – Class percentages [Cl%]
Speed bin fields	16 – Speed bin totals [Vbin] 17 – Speed bin percentages [Vb%] 37 – Speed rating [vRate]
Separation bin fields	41 – Separation bin totals [Sep] 60 – Separation bin percentages [Sep%] 42 – Separation rating [sRate]
Speed limit fields	18 – Number exceeding Posted Speed Limit [>PSL] 19 – Percent exceeding Posted Speed Limit [>PSL] 20 – Number exceeding Speed Limit 1 [>SL1] 21 – Percent exceeding Speed Limit 1 [>SL1%] 61 – Number exceeding Speed Limit 2 [>SL2] 62 – Percent exceeding Speed Limit 2 [>SL2%] 63 – Number exceeding Speed Limit 3 [>SL3] 64 – Percent exceeding Speed Limit 3 [>SL3%] 65 – Number exceeding Speed Limit 4 [>SL4] 66 – Percent exceeding Speed Limit 4 [>SL4%] 67 – Number exceeding Speed Limit 5 [>SL5] 68 – Percent exceeding Speed Limit 5 [>SL5%] 71 – Number exceeding Speed Limit 6 [>SL6] 72 – Percent exceeding Speed Limit 6 [>SL6%] 73 – Number exceeding Speed Limit 7 [>SL7] 74 – Percent exceeding Speed Limit 7 [>SL7%] 75 – Number exceeding Speed Limit 8 [>SL8] 76 – Percent exceeding Speed Limit 8 [>SL8%] 77 – Number exceeding Speed Limit 9 [>SL9] 78 – Percent exceeding Speed Limit 9 [>SL9%] 79 – Number exceeding Speed Limit 10 [>SL10] 80 – Percent exceeding Speed Limit 10 [>SL10%]
Speed statistics fields	22 – Number in speed pace [nPace] 23 – Speed at start of pace [vPace] 24 – Percent in pace [Pace%] 25 – Average speed [Mean] 26 – Minimum speed [Vmin] 27 – Maximum speed [Vmax] 28 – Percentile speed [Vpp] 29 – Percentile speed 2 [Vpp] 30 – 50th percentile speed (Median) [V50] 44 – Standard Deviation [SD] 45 – Variance [Var] 69 – Mean Exceeding (MeanX)
Mass and axle loading fields	31 – Number of isolated single axles [nAx1] 32 – Number of double axel groups [nAx2] 33 – Number of triple (or more) axle groups [nAx3] 34 – Number of equivalent standard axles [ESA] 35 – Estimated freight mass [fMass] 36 – Estimated gross mass [gMass] 43 – Energy [Energy]
Formatting fields	39 – Separate columns with a vertical rule [[]] 40 – Remove separator from next field [] 08 – User defined fixed text [Fix1] 09 – User defined fixed text [Fix2]

Available Custom List Fields, continued...

Other fields

- 38 – Average of sensor correlation [Rho]
- 46 – Normalise divisor [-/n]
- 10 – Direction code [Dir]

Vehicle parameter fields

- 47 – Dataset [DS]
- 48 – Vehicle index [Index]
- 49 – Total hits in vehicle [Ht]
- 50 – Vehicle speed [Speed]
- 51 – Vehicle wheelbase [Wbase]
- 52 – Vehicle headway [Hdwy]
- 53 – Vehicle gap [Gap]
- 54 – Vehicle axles [AX]
- 55 – Vehicle axle groups [Gp]
- 56 – Axle correlation [Rho]
- 57 – Debug parameter [Nm]
- 58 – Vehicle picture [Vehicle Pic]
- 59 – Vehicle class [Cl]

Notes:

This image shows a full page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, providing a template for handwriting practice or general writing. There are no margins, text, or other markings on the page.

11 Notes

[illegible]

[illegible]

12 Exam

Instructions

For the **Multiple Choice** and **True of False** sections please include your answers in a reply email, or annotate the exam using Adobe Acrobat v6. In the reply email simply type the question number along with your respective answer – please type each question on a new line.

Multiple Choice

Try to answer each of the following questions. There are 15 questions in this section.

1. What is the most recent official release of MTE?

- (A) Version 3.18
- (B) Version 3.21
- (C) Version 2.25
- (D) Version 4.1


2. The MetroCount 5600 Roadside Unit stores _____.

- (A) Every tube hit
- (B) Every car
- (C) Every vehicle
- (D) Binned speed and class data

3. Which of the following statements is true?

- (A) The MetroCount 5600's rechargeable battery pack will remain in good condition if it is kept on charge whilst not in use.
- (B) The RAM backup battery should be replaced once per year.
- (C) The MetroCount 5600's main battery pack has an expected life of 290 days of continuous use.
- (D) Surveys on roads with higher vehicle volumes significantly reduce the MetroCount 5600's battery life.

4. What are the pitfalls of the installation below?

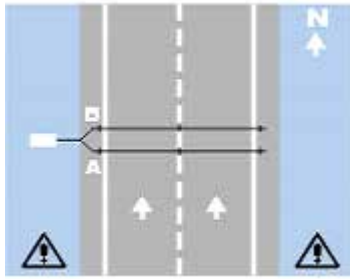

- (A) Simultaneous hits from vehicles travelling in opposing directions.
- (B) Two or more cars travelling near to each other in adjacent lanes may be classified as heavy vehicles.
- (C) The survey may end up over classifying and under counting volume.
- (D) Both B and C.

5. What traffic report may indicate that the survey possibly has a sensor length mismatch?

- (A) A Class Speed Matrix with low speed cars in one direction and high speed two-axle trucks in the other.
- (B) A bi-modal Speed Histogram chart.
- (C) A Class Speed Matrix with high speeding vehicles in both directions.
- (D) A poor sensor balance in the Audit of Data Quality report.


6. During a survey it is advisable to regularly check your site to ensure that any data loss is detected before a survey is completed. How can you check tube hit balance mid-survey?

- (A) Check the RSU Status **Memory** page in MCSetup or MCSetLite.
- (B) In MCSetup, perform an Unload and check the A & B sensor hit plot in the unloading data graph
- (C) In the File Tree, select the Property Sheet's RSU tab and check the status for any messages.
- (D) In MCSetup, View Hits to determine if tube hits are being missed.

7. Which of the following is a step for creating a new site list in MCSetup?

- (A) Select **View >> Preferences** and toggle the **Enforce site list use** checkbox.
- (B) Select **File >> Open sites**.
- (C) Select **File >> New site list**, enter a file name for your new site list.
- (D) Select **View >> New site list**.

8. Upon connecting your computer to a new Roadside Unit, a “Can’t Communicate” or “Port Cannot be Opened” error message appears. A likely reason is:
- (A) The wrong serial port was selected in MCSetup’s preferences.
 - (B) Dirty cables or connectors are used, interrupting communications.
 - (C) The serial port is being used by another program.
 - (D) Any of the above.
9. How do you edit a dataset’s header parameters if you find after a survey that the direction and spacing parameters are wrong?
- (A) In MCReport’s File Tree, right-click the dataset in the List View, and select **Transform data file** in the pop-up menu.
 - (B) In the File Tree, right-click the dataset in the List View, and select **Rename** in the pop-up menu.
 - (C) In the File Tree, right-click the dataset in the List View, and select **Properties** in the pop-up menu.
 - (D) In the File Tree, right-click the dataset in the List View, and select **Delete** in the pop-up menu.
10. MetroCount 5600 2MB Roadside Unit stores up to how many axes?
- (A) 50,000
 - (B) 250,000
 - (C) 500,000
 - (D) 1,000,000
11. Why may better results be obtained from speed surveys with two units, each offset from the midpoint in the direction of travel, rather than one unit in the middle of the road segment?

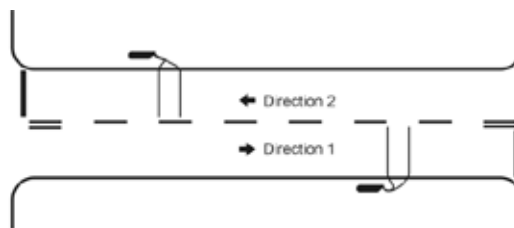


- (A) Most drivers tend to drive approximately 0.4 seconds between them and the preceding vehicle in free-flowing traffic. Therefore, the gap between vehicles reduces closer to intersections.
- (B) Most vehicles decelerate faster than they can accelerate. Therefore, the speed of a vehicle along a road segment is often biased in the direction of travel.
- (C) Most drivers swerve around road tubes. Therefore, setting units offset by some distance ensures drivers do not travel over the unit on the opposite side of the road.
- (D) Both B and C.

- 12. Which of the following will result in useless classification data surveys?**
- (A) Measurement of tube spacing using a standard rule of 1500mm (or 5ft).
 - (B) A and B tubes with unequal lengths (more than 15cm difference [or approx. 6in]) from the wheel path to the RSU.
 - (C) Both tubes perpendicular to the vehicle path.
 - (D) Both tubes parallel.
- 13. Which of the following more correctly explains the virtue of site lists?**
- (A) They allow the user to survey the same sites repeatedly.
 - (B) They allow clients (internal or external) to furnish pre-compiled, ready to run survey programs.
 - (C) They allow for consistent site details.
 - (D) All of the above.
- 14. From which report can you export data to another software package (eg MS Excel)?**
- (A) Velocity Dispersion.
 - (B) Weekly Vehicle Counts.
 - (C) Phase Statistics.
 - (D) Custom List Report.
- 15. Which chart allows detailed data auditing? (Hint: examine each report by generating a sample using your own data).**
- (A) Flow Clustered by Class
 - (B) Axle Position Histogram
 - (C) Speed Histogram
 - (D) Velocity Dispersion

True or False

Answer each of the following questions. There are 10 questions in this section.

1. A Roadside Unit per lane will ensure the best achievable accuracy for the site below, in terms of volume, classification and speed. True / False

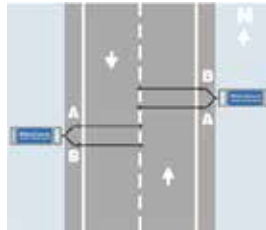

2. The File Tree view in MCReport displays a red triangle when a folder contains no MetroCount datasets. True / False
3. One of the virtues of the Axle Hit Balance is that it can be used for identifying periods of sensor failure during the course of a survey. True / False
4. The report cloning feature in MCReport provides a quick method for comparing reports. True / False
5. All data is deleted when you select “*Stop the RSU after unloading data*”. True / False
6. The lower the lockout value, the less data your RSU will log. True / False
7. The site’s GPS location can be included in site lists, setup parameters and data files. True / False
8. The *Audit of Data Quality* report examines your data to report a “Pass” or “Fail” result depending on your specified attributes. True / False
9. “*Favorites*” folder can be selected in the File Tree to quickly jump to an often used folder. True / False
10. Separation is an *Advanced Profile* setting allowing for measuring time offset between vehicles. True / False

Activities

Complete all three separate reporting activities. Simply produce and save each report, then attach them to the same reply email for the previous sections.

In MCRreport, use the *UrbanHwy.ec0* dataset to complete all three activities.

To load *UrbanHwy.ec0* click the “new report” button to display the **File Management List**. Now click on the **Recent files** scroll list and select *UrbanHwy.ec0* from the drop-down menu.

1. **Produce a Speed Histogram for school zone periods (i.e. Weekdays, 7:30am – 9:00am, 2:30pm-4:00pm). Provide both the histogram (i.e. chart on the left hand side) and the header with statistical information (i.e. text on the right hand side).**
2. **Produce a Speed Bin chart. Change the default speed bin settings to provide 2km/h resolution for the 80 to 90 km/h range. (If working with non-metric speed units [i.e. mph] change the default speed bin settings to provide 2mph resolution for the 40 to 50 mph range). Then change the graph into bars/blocks. Provide the chart only**
3. **Create a Custom List report with the following parameters in 2 hour time intervals:**
 - i. 24-hour time (0000 – 2359) [Time],
 - ii. Number in time step [Total],
 - iii. Class Percentages [Cl%],
 - iv. Mean Speed [Mean],
 - v. 85th Percentile [Vpp], and
 - vi. Mean Exceeding [MeanX].

Return your answers and reports to: exam@metrocount.com

[illegible]

For further support, contact MetroCount:

AUSTRALIA / NEW ZEALAND / ASIA

Microcom Pty Ltd

ABN 92 009 273 410

P.O. Box 1182, Fremantle Western Australia 6959

Phone: **(08) 9430 6164**

Int'l Phone: +61 8 9430 6164

Fax: **(08) 9430 6187**

Int'l Phone: +61 8 9430 6187

E-mail: **sales@metrocount.com**

UK / EUROPE

MetroCount (UK) Ltd

**Unit 15 Oliver Business Park, Oliver Road,
Park Royal, London NW10 7JB**

Phone: **(020) 8782 8999**

Int'l Phone: +44 20 8782 8999

Fax: **(020) 8782 8737**

Int'l Phone: +44 20 8782 8737

E-mail: uksales@metrocount.com

USA / CANADA / MEXICO / S. AMERICA

MetroCount USA Inc.

11820 West Market Place, Suite M, Fulton MD 20759

Phone toll free: **(800) 576 5692**

Int'l Phone: +1 301 497 6101

Fax toll free: **(301) 490 3521**

Int'l Phone: +1 301 490 3521

E-mail: **usasales@metrocount.com**

Copyright (c) 1991 - 2013 Microcom Pty Ltd. All rights reserved. MetroCount, Traffic Executive, MCSetup, MCReport, MCTools, MCSetLite are trademarks of Microcom Pty Ltd. Microcom is a Registered Trademark in Australia. All other trademarks are the property of their respective owners. Other Microcom intellectual property including Patents and designs may be protected by international law. Subject to the terms of this EULA, the furnishing of this software, the accompanying product or any related documentation or materials does not give you any license to this intellectual property.

For any further information on this license please contact Microcom Pty Ltd, P.O. Box 1182, Fremantle Western Australia 6959. ACN 009 273 410

©2013 MetroCount®

MetroCount[®]

traffic data specialists

This is to certify that:

C
e
r
t
i
f
i
c
a
t
i
o
n

Has attended the MTE Certification Training Course
Covering MetroCount Traffic Executive software v3.21 and
the MetroCount 5600 Series Vehicle classifier System

Attendance date: _____

Authorized

**MetroCount[®] Traffic Executive
Certification Training**



Attendance Certificate